


INSTALLATION MANUAL

SUNLINE 2000™ SINGLE PACKAGE HEAT PUMP

BP 036 - 072

CONTENTS

GENERAL	4
SAFETY CONSIDERATIONS	4
INSPECTION	4
REFERENCE	4
RENEWAL PARTS	4
APPROVALS	4
PRODUCT NOMENCLATURE	5
INSTALLATION	6
OPERATION	38
START-UP (COOLING)	43
TROUBLESHOOTING	43
MAINTENANCE	47

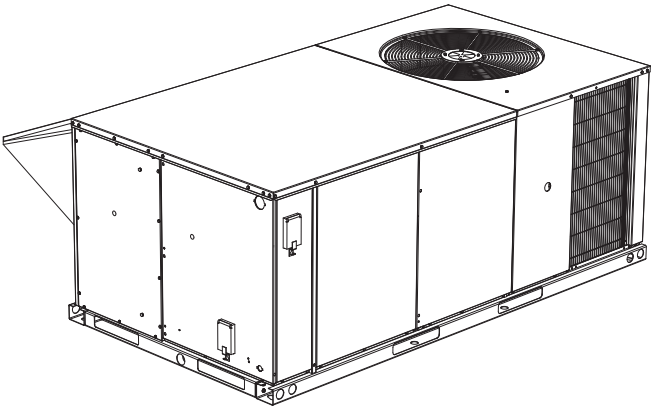

See the following pages for a complete Table of Contents.

NOTES, CAUTIONS AND WARNINGS

The installer should pay particular attention to the words: *NOTE*, *CAUTION*, and *WARNING*. Notes are intended to clarify or make the installation easier. Cautions are given to prevent equipment damage. Warnings are given to alert installer that personal injury and/or equipment damage may result if installation procedure is not handled properly.

CAUTION: READ ALL SAFETY GUIDES BEFORE YOU
BEGIN TO INSTALL YOUR UNIT.

SAVE THIS MANUAL



TABLE OF CONTENTS

GENERAL	4	OPERATION	38
SAFETY CONSIDERATIONS	4	SEQUENCE OF OPERATIONS OVERVIEW	38
INSPECTION	4	COOLING SEQUENCE OF OPERATION	39
REFERENCE	4	CONTINUOUS BLOWER	39
RENEWAL PARTS	4	INTERMITTENT BLOWER	39
APPROVALS	4	NO OUTDOOR AIR OPTIONS	39
PRODUCT NOMENCLATURE	5	ECONOMIZER WITH SINGLE ENTHALPY SENSOR	39
INSTALLATION	6	ECONOMIZER WITH DUAL ENTHALPY SENSORS	39
INSTALLATION SAFETY INFORMATION	6	ECONOMIZER (SINGLE OR DUAL) WITH POWER EXHAUST	39
LIMITATIONS	6	MOTORIZED OUTDOOR AIR DAMPERS	39
LOCATION	7	COOLING OPERATION ERRORS	39
RIGGING AND HANDLING	7	HIGH-PRESSURE LIMIT SWITCH	39
CLEARANCES	7	LOW-PRESSURE LIMIT SWITCH	40
DUCTWORK	7	FREEZESTAT	40
CONDENSATE DRAIN	8	LOW AMBIENT COOLING	40
COMPRESSORS	8	SAFETY CONTROLS	40
FILTERS	8	COMPRESSOR PROTECTION	40
SERVICE ACCESS	8	FLASH CODES	40
THERMOSTAT	10	RESET	41
POWER AND CONTROL WIRING	10	HEATING SEQUENCE OF OPERATIONS	41
OPTIONS/ACCESSORIES	10	WITH OR WITHOUT ELECTRIC HEAT	41
ELECTRIC HEAT	10	DEFROST MODE (3 THRU 5 TON)	41
ECONOMIZER/MOTORIZED DAMPER AND RAIN HOOD	11	DEFROST MODE (6 TON)	41
POWER EXHAUST/BAROMETRIC RELIEF DAMPER AND RAIN HOOD	11	SAFETY CONTROLS	42
ECONOMIZER AND POWER EXHAUST DAMPER SET POINT ADJUSTMENTS AND INFORMATION	11	HEAT ANTICIPATOR SETPOINTS	42
MINIMUM POSITION ADJUSTMENT	11	START-UP (COOLING)	43
ENTHALPY SET POINT ADJUSTMENT	11	PRESTART CHECK LIST	43
POWER EXHAUST DAMPER SETPOINT (WITH OR WITHOUT POWER EXHAUST)	12	OPERATING INSTRUCTIONS	43
INDOOR AIR QUALITY	12	POST START CHECK LIST	43
PHASING	37	SHUT DOWN	43
SUPPLY AIR BLOWERS	37	TROUBLESHOOTING	43
CHECKING SUPPLY AIR CFM	37	COOLING TROUBLESHOOTING GUIDE	43
		UNIT FLASH CODES	46
		FAN ON AND OFF DELAYS	47
		MAINTENANCE	47
		NORMAL MAINTENANCE	47
		FILTERS	47
		MOTORS	47
		OUTDOOR COIL	47

LIST OF FIGURES

<u>Fig. #</u>	<u>Pg. #</u>	<u>Fig. #</u>	<u>Pg. #</u>
1	RECOMMENDED DRAIN PIPING	8	UNIT WITH ECONOMIZER RAINHOOD
2	COMPRESSOR RESTRAINING BRACKET	8	UNIT WITH FIXED OUTDOOR AIR/MOTORIZED DAMPER RAINHOOD
3	TYPICAL FIELD POWER & CONTROL WIRING	9	UNIT DIMENSIONS (REAR VIEW)
4	ENTHALPY SETPOINT ADJUSTMENT	13	DISCONNECT/BLOWER ACCESS LOCATION
5	HONEYWELL ECONOMIZER CONTROL W7212	13	BELT ADJUSTMENT
6	FOUR AND SIX POINT LOADING	14	PRESSURE DROP ACROSS COIL
7	UNIT DIMENSIONS FRONT VIEW	27	UNIT CONTROL BOARD
		14	UNIT CONTROL BOARD

LIST OF TABLES

<u>Tbl. #</u>	<u>Pg. #</u>	<u>Tbl. #</u>	<u>Pg. #</u>
1	UNIT APPLICATION DATA (BP)	6	
2	CONTROL WIRE SIZES	10	
3	ELECTRIC HEATER CFM LIMITATIONS	10	
4	PHYSICAL DATA	14	
5	OPERATING WEIGHTS (LBS.)	15	
6	ELECTRICAL DATA - BP036-072 DIRECT DRIVE W/O POWERED CONVENIENCE OUTLET	15	
7	ELECTRICAL DATA - BP036-072 BELT DRIVE W/O POWERED CONVENIENCE OUTLET	17	
8	ELECTRICAL DATA - BP036-072 BELT DRIVE HIGH STATIC W/O POWERED CONVENIENCE OUTLET	19	
9	ELECTRICAL DATA - BP036-072 DIRECT DRIVE W/POWERED CONVENIENCE OUTLET	21	
10	ELECTRICAL DATA - BP036-072 BELT DRIVE W/POWERED CONVENIENCE OUTLET	23	
11	ELECTRICAL DATA - BP036-072 BELT DRIVE HIGH STATIC W/POWERED CONVENIENCE OUTLET	25	
12	ELECTRIC HEAT CORRECTION FACTORS	27	
13	VOLTAGE LIMITATIONS	27	
14	UTILITIES ENTRY	29	
15	MINIMUM CLEARANCES	29	
16	SUPPLY AIR BLOWER PERFORMANCE (BP036 BELT DRIVE) - SIDE DUCT APPLICATION	30	
		17	SUPPLY AIR BLOWER PERFORMANCE (BP036 BELT DRIVE) - BOTTOM DUCT APPLICATION
		18	SUPPLY AIR BLOWER PERFORMANCE (BP048 BELT DRIVE) - SIDE DUCT APPLICATION
		19	SUPPLY AIR BLOWER PERFORMANCE (BP048 BELT DRIVE) - BOTTOM DUCT APPLICATION
		20	SUPPLY AIR BLOWER PERFORMANCE (BP060 BELT DRIVE) - SIDE DUCT APPLICATION
		21	SUPPLY AIR BLOWER PERFORMANCE (BP060 BELT DRIVE) - BOTTOM DUCT APPLICATION
		22	SUPPLY AIR BLOWER PERFORMANCE (BP072 BELT DRIVE) - SIDE DUCT APPLICATION
		23	SUPPLY AIR BLOWER PERFORMANCE (BP072 BELT DRIVE) - BOTTOM DUCT APPLICATION
		24	SUPPLY AIR BLOWER PERFORMANCE (BP036, 048, 060 & 072 DIRECT DRIVE) - SIDE FLOW APPLICATION
		25	SUPPLY AIR BLOWER PERFORMANCE (BP036, 048, 060 & 072 DIRECT DRIVE) - BOTTOM FLOW APPLICATION
		26	BELT DRIVE RPM SELECTION
		27	BELT DRIVE BLOWER MOTOR AND DRIVE DATA
		28	STATIC RESISTANCES
		29	ELECTRIC HEAT LIMIT CONTROL SETTING
		30	ELECTRIC HEAT ANTICIPATOR SETPOINTS
		31	UNIT CONTROL BOARD FLASH CODES

GENERAL

YORK Model BP units are single package heat pumps equipped with optional factory installed electric heaters. These are designed for outdoor installation on a rooftop or slab.

The units are completely assembled on rigid, permanently attached base rails. All piping, refrigerant charge, and electrical wiring is factory installed and tested. The units require electric power, duct connections, and fixed outdoor air intake damper (units without economizer or motorized damper option only) at the point of installation.

The supplemental electric heaters have nickel-chrome elements and utilize single point power connection.

SAFETY CONSIDERATIONS

Due to system pressure, moving parts and electrical components, installation and servicing of air conditioning equipment can be hazardous. Only qualified, trained, service personnel should install, repair, maintain or service this equipment.

Observe all precautions in the literature, on labels and tags accompanying the equipment whenever working on air conditioning equipment. Be sure to follow all other safety precautions that apply.

Wear safety glasses and work gloves, and follow all safety codes. Use a quenching cloth and have a fire extinguisher available for all brazing operations.

INSPECTION

As soon as a unit is received, it should be inspected for possible damage during transit. If damage is evident, the extent of the damage should be noted on the carrier's freight bill. A separate request for inspection by the carrier's agent should be made in writing.

REFERENCE

Additional information on the design, installation, operation and service of this equipment is available in the following reference forms:

- 362242 -General Installation
- 035-19404-000 -Economizer Accessory
- 530.18-N1.13V -Man. Outdoor Air Damper Accessory 0 - 35%

- 530.18-N1.14V -Man. Outdoor Air Damper Accy 0 - 100%
- 035-07364-000 - Motorized Outdoor Air Damper Accy.
- 035-19422-000 – Electric Heat Accessory
- 035-19405-000 - Barometric Relief Damper
- 530.46-N1.1V - Dual Enthalpy Accessory
- 530.18-N1.10V - Power Exhaust Accessory

RENEWAL PARTS

Contact your local York® parts distribution center for authorized replacement parts.

APPROVALS

Design listed by CSA as follows:

- For use as a heat pump only with or without optional electric heat.
- For outdoor installation only.
- For installation on combustible material.

CAUTION


This product must be installed in strict compliance with the enclosed installation instructions and any applicable local, state, and national codes including, but not limited to, building, electrical, and mechanical codes.

WARNING

Improper installation may create a condition where the operation of the product could cause personal injury or property damage.

The installer should pay particular attention to the words: NOTE, CAUTION and WARNING. Notes are intended to clarify or make the installation easier. Cautions are given to prevent equipment damage. Warnings are given to alert installer that personal injury and/or equipment damage may result if installation procedure is not handled properly.

PRODUCT NOMENCLATURE

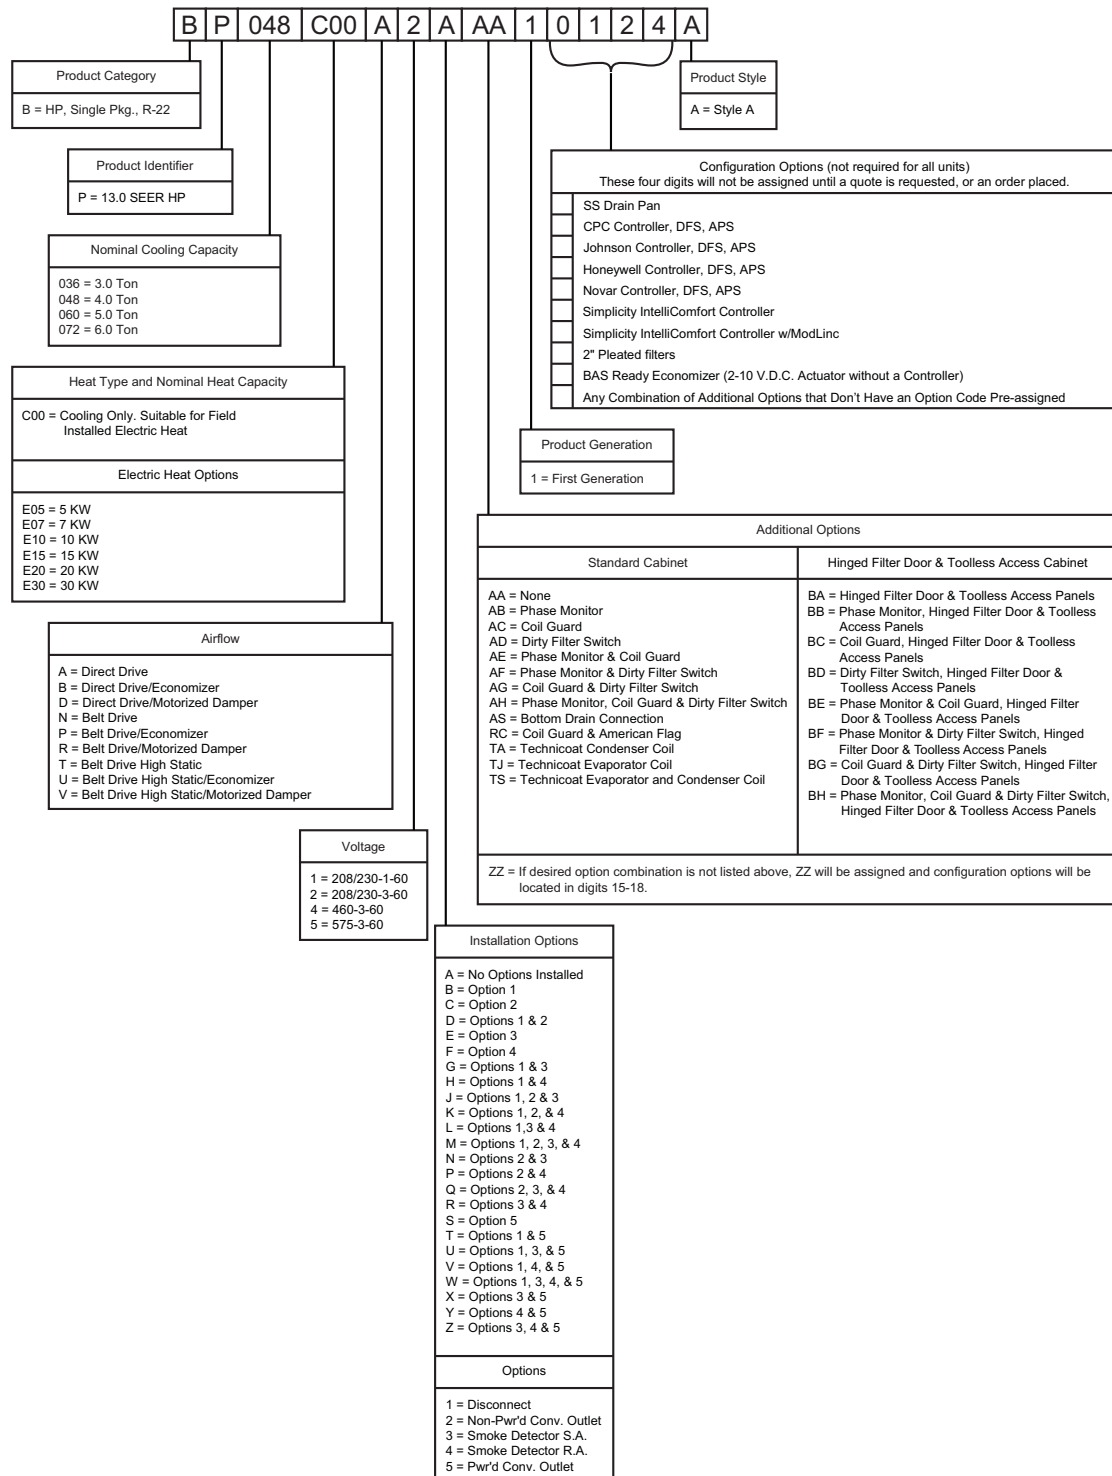

INSTALLATION

INSTALLATION SAFETY INFORMATION

Read these instructions before continuing this appliance installation. This is an outdoor combination heating and cooling unit. The installer must assure that these instructions are made available to the consumer and with instructions to retain them for future reference.

1. Install this unit only in a location and position as specified on page 7 of these instructions.
2. This equipment is not to be used for temporary heating of buildings or structures under construction.

LIMITATIONS

These units must be installed in accordance with the following national and local safety codes:

In U.S.A.:

- National Electrical Code ANSI/NFPA No. 70.

In Canada:

- Current Canadian Electrical Code C22.1.
- Local plumbing and waste water codes.
- Other applicable local codes.

Refer to the Unit Application Data Table 1 and the Electrical Data table for the unit.

If components are to be added to a unit to meet local codes, they are to be installed at the dealer's and/or the customer's expense.

Size of unit for proposed installation should be based on heat loss/heat gain calculation made according to the methods of the Air Conditioning Contractors of America (ACCA).

This unit is not to be used for temporary heating of buildings or structures under construction.

CAUTION

The Simplicity® control board used in this product will effectively operate the cooling system down to 0°F when this product is applied in a comfort cooling application for people. An economizer is typically included in this type of application. When applying this product for process cooling applications (computer rooms, switchgear, etc.), please reference applications bulletin AE-011-07 or call the applications department for Unitary Products @ 1-877-UPG-SERV for guidance. Additional accessories may be needed for stable operation at temperatures below 30° F.

TABLE 1: UNIT APPLICATION DATA (BP)

UNIT MODEL NUMBER		036	048	060	072
Voltage Variation, Min. / Max. ¹	208/230	187/253			
	460	414/506			
	575	518/630			
Supply Air CFM, Nom.		1200	1600	2000	2400
Wet Bulb Temperature (°F) of Air on Evaporator Coil, Min./Max		57/72			
Dry Bulb Temperature (°F) of Air on Condenser Coil, Min./Max.		0/125			

1. Utilization range "A" in accordance with ARI Standard 110.

LOCATION

Use the following guidelines to select a suitable location for these units.

1. Unit is designed for outdoor installation only.
2. Condenser coils must have an unlimited supply of air.
3. Where a choice of location is possible, position the unit on either north or east side of building.
4. For ground level installation, use a level concrete slab with a minimum thickness of 4 inches. The length and width should be at least 6 inches greater than the unit base rails. Do not tie slab to the building foundation.
5. Roof structures must be able to support the weight of the unit and its options and/or accessories. Unit must be installed on a solid level roof curb or appropriate angle iron frame.
6. Maintain level tolerance to 1/2 inch maximum across the entire length or width of the unit.

If a unit is to be installed on a roof curb or special frame other than a YORK roof curb, gasketing must be applied to all surfaces that come in contact with the unit underside.

RIGGING AND HANDLING

Exercise care when moving the unit. Do not remove any packaging until the unit is near the place of installation. Rig the unit by attaching chain or cable slings to the lifting holes provided in the base rails. Spreader bars, whose length exceeds the largest dimension across the unit, **MUST BE USED**.

Units may also be moved or lifted with a forklift. Slotted openings in the base rails are provided for this purpose. Fork lengths must be a minimum of 42 inches.

Remove the nesting brackets from the four corners on the top of the unit. All screws that are removed when removing the brackets must be replaced on the unit.

Refer to Table 5 for unit weights and to the Figure 6 for approximate center of gravity.

CAUTION

Before lifting a unit, make sure that all panels are in place and that its weight is distributed equally on all cables so it will lift evenly.

CLEARANCES

All units require certain clearances for proper operation and service. Installer must make provisions for adequate ventilation air. Refer to Dimensions and Clearances shown in Figures 7 through 10 and Table 15 for the clearances required for combustible construction, servicing, and proper unit operation.

WARNING

Do not permit overhanging structures or shrubs to obstruct outdoor air discharge outlet.

DUCTWORK

Ductwork should be designed and sized according to the methods in Manual Q of the Air Conditioning Contractors of America (ACCA).

A closed return duct system shall be used. This shall not preclude use of economizers or outdoor fresh air intake. The supply and return air duct connections at the unit should be made with flexible joints to minimize noise.

The supply and return air duct systems should be designed for the CFM and static requirements of the job. They should **NOT** be sized to match the dimensions of the duct connections on the unit.

CAUTION

When fastening ductwork to side duct flanges on unit, insert screws through duct flanges only. **DO NOT** insert screws through casing. Outdoor ductwork must be insulated and waterproofed.

Refer to Figures 7 and 10 for information concerning side and bottom supply and return air duct openings.

CONDENSATE DRAIN

Plumbing must conform to local codes. Use a sealing compound on male pipe threads. Install a condensate drain line from the 3/4" NPT female connection on the unit to an open drain.

NOTE: The condensate drain operates in a negative pressure in the cabinet. The condensate drain line **MUST** be trapped to provide proper drainage. See Figure 1.

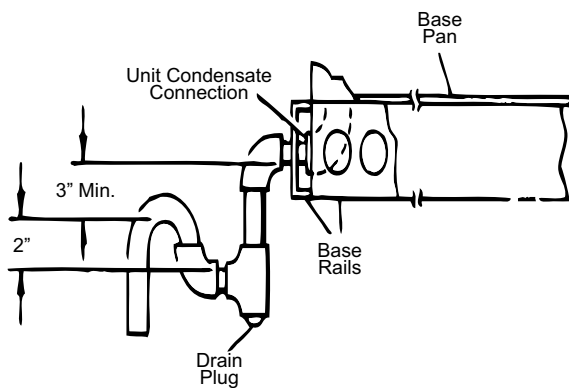


FIGURE 1 - RECOMMENDED DRAIN PIPING

COMPRESSORS

Units are shipped with compressor mountings factory-adjusted and ready for operation.

Units with scroll compressors have a shipping bracket which must be removed after the unit is set in place. See Figure 2.

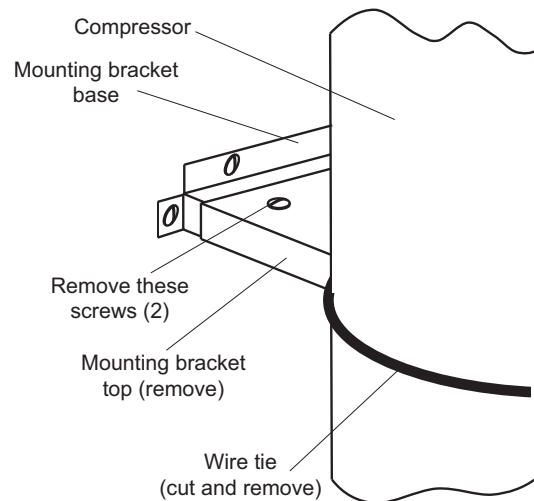


FIGURE 2 - COMPRESSOR RESTRAINING BRACKET

same size and type. Dirty filters will reduce the capacity of the unit and will result in frosted coils or safety shut-down. Minimum filter area and required sizes are shown in Physical Data Table 4.

SERVICE ACCESS

The following removable panels provide access to all serviceable components:

- Compressor compartment
- Electric Heat compartment
- Blower compartment
- Main control box
- Filter compartment

Refer to the Dimensions and Clearances shown in Figures 7 and 11 for location of these access panels.

CAUTION

Do not loosen compressor mounting bolts.


CAUTION

Make sure that all screws and panel latches are replaced and properly positioned on the unit to maintain an airtight seal.

FILTERS


One-inch or two-inch filters can be supplied with each unit. Filters must always be installed ahead of the evaporator coil and must be kept clean or replaced with

TYPICAL POWER WIRING

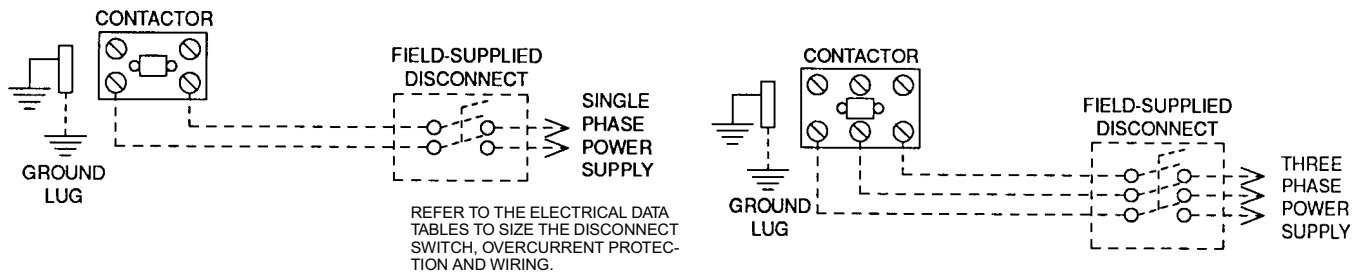


TYPICAL CONTROL WIRING

COOLING / HEATING (24 VOLT THERMOSTAT)

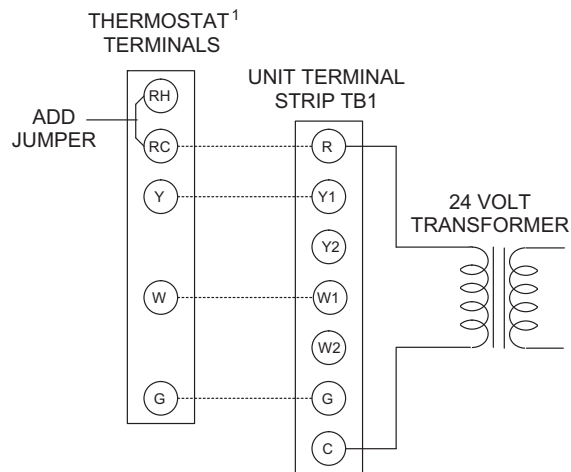

¹24 VOLT THERMOSTAT 2ET07701024. TO CONTROL THE ECONOMIZER ON THE SECOND STAGE COOLING OR TO HAVE AN ELECTRIC HEAT ACCESSORY WITH TWO STAGES OF HEAT, USE THERMOSTAT 2TH0471024.

COOLING / HEATING (ELECTRONIC THERMOSTAT)
MULTI STAGE

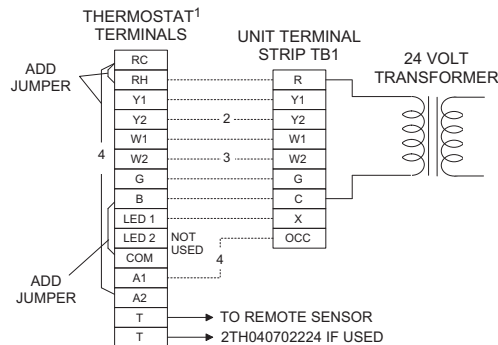


¹ ELECTRONIC PROGRAMMABLE THERMOSTAT 2ET04700224 (INCLUDES SUBBASE).

² SECOND STAGE COOLING IS NOT REQUIRED ON UNITS LESS ECONOMIZER.

³ SECOND STAGE HEATING IS ONLY REQUIRED ON UNITS WITH A TWO STAGE ELECTRIC HEATER OR 2 STAGE GAS HEAT.

⁴ REMOVE JUMPER J2 FROM TERMINALS 4 AND 9 ON JUMPER PLUG CONNECTOR P6 ON UNITS WITH ECONOMIZER. TERMINALS A1 AND A2 PROVIDE A RELAY OUT-PUT TO CLOSE THE OUTDOOR ECONOMIZER DAMPERS WHEN THE THERMOSTAT SWITCHES TO THE SET-BACK POSITION.

COOLING / HEATING (ELECTRONIC THERMOSTAT)
SINGLE STAGE

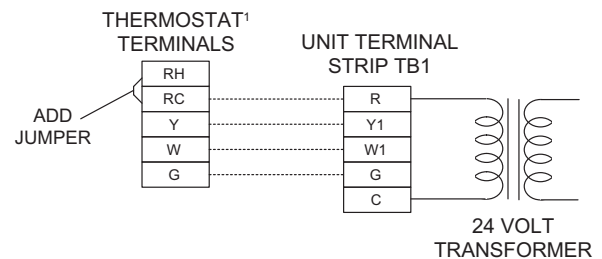

¹ELECTRONIC PROGRAMMABLE THERMOSTAT 2ET07701024 (INCLUDES SUBBASE). TO CONTROL THE ECONOMIZER ON SECOND STAGE COOLING, USE THERMOSTAT 2TH04700224.

FIGURE 3 - TYPICAL FIELD POWER & CONTROL WIRING

THERMOSTAT

The room thermostat should be located on an inside wall approximately 56 inches above the floor where it will not be subject to drafts, sun exposure or heat from electrical fixtures or appliances. Follow the manufacturer's instructions enclosed with the thermostat for general installation procedure. A minimum of seven color-coded insulated wires (#18 AWG) should be used to connect the thermostat to the unit.

POWER AND CONTROL WIRING

Field wiring to the unit must conform to provisions of the National Electrical Code, ANSI / NFPA No. 70 (in U.S.A.), current Canadian Electrical Code C22.1 (in Canada) and/or local ordinances. The unit must be electrically grounded in accordance with NEC and CEC (as specified above) and/or local codes. Voltage tolerances, which must be maintained at the compressor terminals, during starting and running conditions, are indicated on the unit Rating Plate and the Unit Application Data table.

⚠ CAUTION

208/230-3-60 and 380/415-3-50 units control transformers are factory wired for 230v and 415v power supply respectively. Change tap on transformer for 208-3-60 or 380-3-50 operation.
See unit wiring diagram.

The internal wiring harness furnished with this unit is an integral part of a CSA design certified unit. Field alteration to comply with electrical codes should not be required.

A fused disconnect switch should be field provided for the unit. The switch must be separate from all other circuits. Wire entry at knockout openings require conduit fittings to comply with NEC (in U.S.A.), CEC (in Canada) and/or local codes. If any of the wire supplied with the unit must be replaced, replacement wire must be of

the type shown on the wiring diagram and the same minimum gauge as the replaced wire.

Use copper conductors properly sized to carry the load. Each unit must be wired with a separate branch circuit fed directly from the meter panel and properly fused.

⚠ CAUTION

When connecting electrical power and control wiring to the unit, waterproof type connectors **MUST BE USED** so that water or moisture cannot be drawn into the unit during normal operation. The above waterproofing conditions will also apply when installing a field-supplied disconnect switch.

Refer to the Typical Field Wiring Figure 3 and to the appropriate unit wiring diagram for control circuit and power wiring information.

TABLE 2: CONTROL WIRE SIZES

Wire Size	Maximum Length ¹
18 AWG	150 Feet

1. From the unit to the thermostat and back to the unit.

OPTIONS/ACCESSORIES

ELECTRIC HEAT

The factory- or field-installed heaters are wired for single point power supply. Power supply need only be brought into the single point terminal block and thermostat wiring to the low voltage terminal strip located in the upper portion of the unit control box.

These CSA approved heaters are located within the central compartment of the unit with the heater elements extending into the supply air chamber. Refer to Figure 7 for access panel location.

Fuses are supplied, where required, by the factory. Some KW sizes require fuses and others do not. Refer to Table 3 for minimum CFM limitations and to Tables 6

TABLE 3: ELECTRIC HEATER CFM LIMITATIONS

UNIT MODEL SIZE NOMINAL TONS	VOLTAGE	MINIMUM SUPPLY AIR CFM					
		HEATER SIZE NOMINAL KW					
		5	7	10	15	20	30
036 (3)	208/230-1-60	900	900	900	900	900	-
	208/230-3-60	900	900	900	900	900	-
	460-3-60	-	900	900	900	900	-
	600-3-60	-	-	900	900	900	-
048 (4)	208/230-1-60	1200	1200	1200	1200	1200	-
	208/230-3-60	1200	1200	1200	1200	1200	-
	460-3-60	-	1200	1200	1200	1200	-
	600-3-60	-	-	1200	1200	1200	-

TABLE 3: ELECTRIC HEATER CFM LIMITATIONS

UNIT MODEL SIZE NOMINAL TONS	VOLTAGE	MINIMUM SUPPLY AIR CFM					
		HEATER SIZE NOMINAL KW					
		5	7	10	15	20	30
060 (5)	208/230-1-60	1500	1500	1500	1500	1500	1500
	208/230-3-60	1500	1500	1500	1500	1500	1500
	460-3-60	-	1500	1500	1500	1500	1500
	600-3-60	-	-	1500	1500	1500	1500
072 (6)	208/230-1-60	1500	1500	1500	1500	1500	1500
	208/230-3-60	1500	1500	1500	1500	1500	1500
	460-3-60	-	1500	1500	1500	1500	1500
	600-3-60	-	-	1500	1500	1500	1500

ECONOMIZER/MOTORIZED DAMPER AND RAIN HOOD

The instruction for the optional economizer/motorized damper and rain hood can be found in form 035-07364-000. Use these instructions when field assembling an economizer rain hood onto a unit. The outdoor and return air dampers, the damper actuator, the damper linkage, the outdoor and return air divider baffles, and all the control sensors are factory mounted as part of the "Factory installed" economizer/motorized damper options.

POWER EXHAUST/BAROMETRIC RELIEF DAMPER AND RAIN HOOD

The instructions for the power exhaust/barometric relief damper and rain hood can be found in form 530.18-N1.10V.

All of the components, including the dampers, hardware, and mounting instructions are shipped in a single package external from the unit and must be field assembled and installed.

Power exhaust is only available as a field installed accessory.

ECONOMIZER AND POWER EXHAUST DAMPER SET POINT ADJUSTMENTS AND INFORMATION

Remove the economizer access panel from the unit. Loosen but do not remove the two panel latches. Locate the economizer control module, where the following adjustments will be made.

⚠ CAUTION

Extreme care must be exercised in turning all setpoint, maximum, and minimum damper positioning adjustment screws to prevent twisting them off.

Check that the damper blades move smoothly without binding; carefully turn the Minimum Position Adjusting

screw (found on the damper control module) fully clockwise and then set the thermostat indoor fan switch to the on position and then off, or energize and de-energize terminals "R" to "G".

MINIMUM POSITION ADJUSTMENT

With thermostat set to indoor fan on position, or terminals "R" to "G" energized, turn the Minimum Position Adjusting screw (located on the damper control module) counterclockwise until the desired minimum damper position has been attained.

ENTHALPY SET POINT ADJUSTMENT

The enthalpy setpoint may now be set by selecting the desired setpoint shown in the Enthalpy Setpoint Adjustment Figure 4. Adjust as follows:

- For a single enthalpy operation carefully turn the setpoint adjusting screw (found on the damper control module) to the "A", "B", "C" or "D" setting corresponding to the lettered curve of the Enthalpy Setpoint Adjustment Figure 4.
- For a dual enthalpy operation, carefully turn the setpoint adjusting screw fully clockwise past the "D" setting.

POWER EXHAUST DAMPER SETPOINT (WITH OR WITHOUT POWER EXHAUST)

- With no power exhaust option, adjust the Exhaust Air Adjustment Screw fully clockwise.
- With power exhaust option, each building pressurization requirement will be different. The point at which the power exhaust comes on is determined by the economizer damper position (Percent Open). The Exhaust Air Adjustment Screw should be set at the Percent Open of the economizer damper at which the power exhaust is needed. It can be set from 0 to 100% damper open.

INDOOR AIR QUALITY

Indoor air quality (indoor sensor input): Terminal AQ accepts a +2 to +10 Vdc signal with respect to the (AQ1) terminal. When the signal is below it's setpoint, the actuator is allowed to modulate normally in accor-

dance with the enthalpy and mixed air sensor inputs. When the AQ signal exceeds it's setpoint setting and there is no call for free cooling, the actuator is proportionately modulated from the 2 to 10 Vdc signal, with 2 Vdc corresponding to full closed and 10 Vdc corresponding to full open. When there is no call for free cooling, the damper position is limited by the IAQ Max damper position setting. When the signal exceeds it's setpoint (Demand Control Ventilation Setpoint) setting and there is a call for free cooling, the actuator modulates from the minimum position to the full open position based on the highest call from either the mixed air sensor input or the AQ voltage input.

- Optional CO₂ Space Sensor Kit Part # 2AQ04700324
- Optional CO₂ Unit Sensor Kit Part # 2AQ04700424

Replace the economizer access panel.

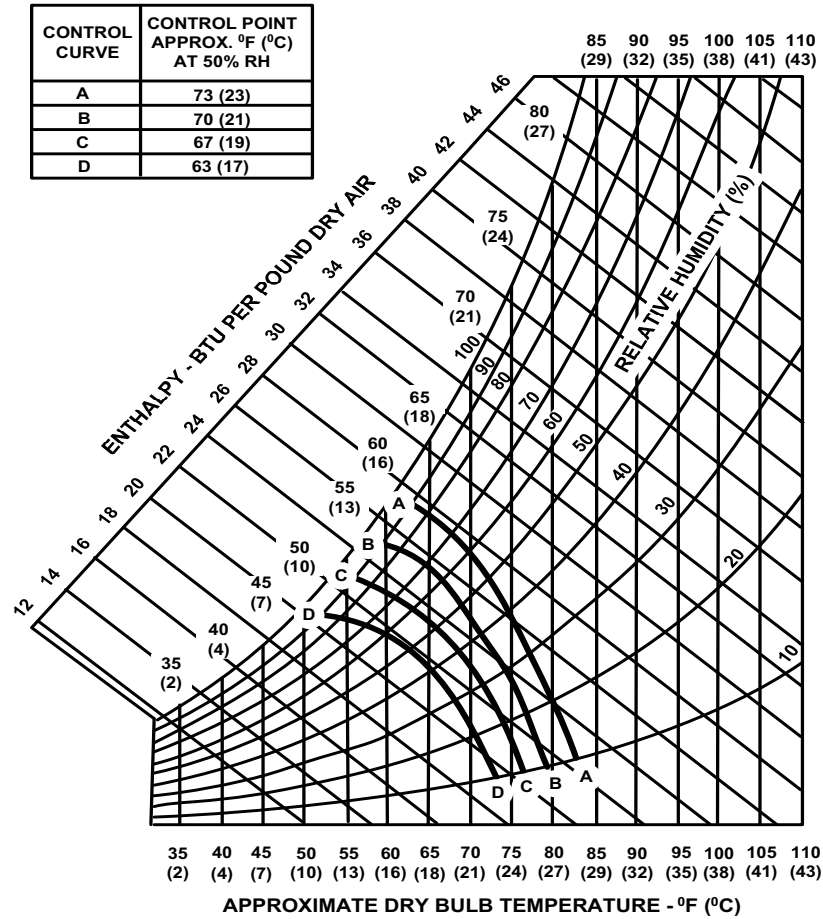


FIGURE 4 - ENTHALPY SETPOINT ADJUSTMENT

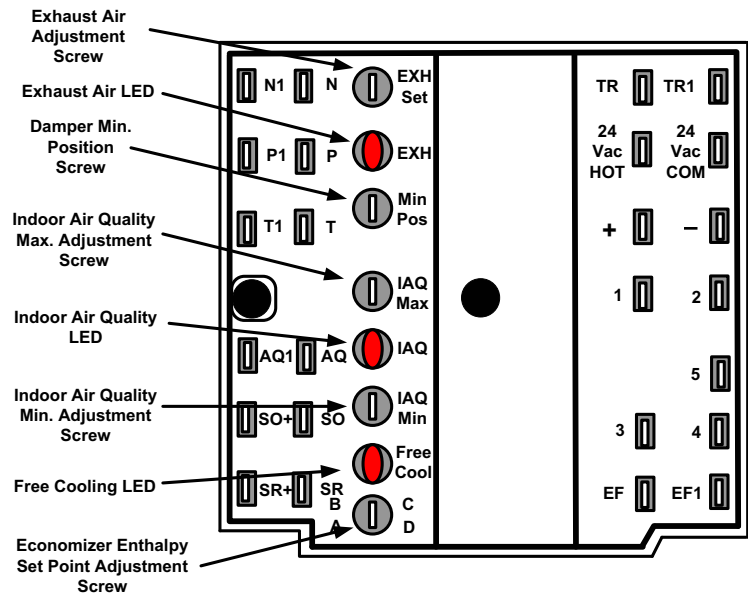


FIGURE 5 - HONEYWELL ECONOMIZER CONTROL W7212

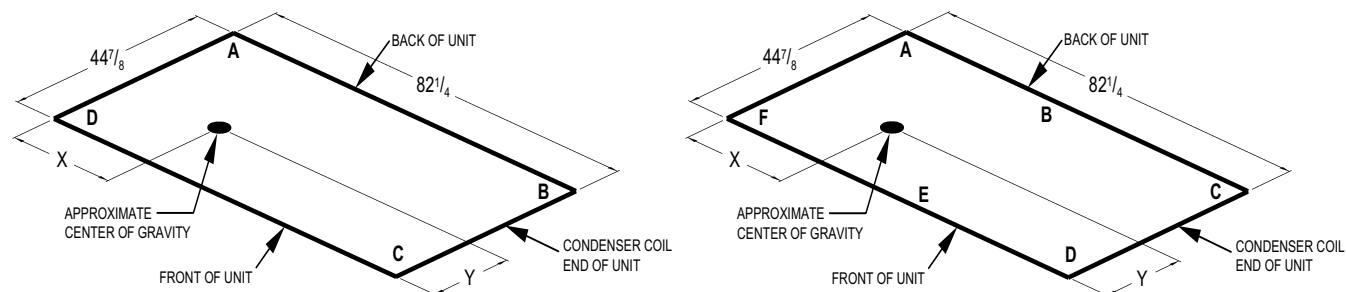


FIGURE 6 - FOUR AND SIX POINT LOADING

Size (Tons)	Model	Weight (lbs.)		Center of Gravity		4 Point Load Location (lbs.)				6 Point Load Location (lbs.)					
		Shipping	Operating	X	Y	A	B	C	D	A	B	C	D	E	F
036 (3)	BP	580	575	39	20	135	121	151	168	91	85	80	99	106	114
048 (4)	BP	590	585	39	20	137	124	154	171	93	87	81	101	108	116
060 (5)	BP	595	590	39	20	138	125	155	172	94	87	82	102	109	117
072 (6)	BP	615	610	39	20	143	129	160	178	97	90	84	105	112	121

TABLE 4: PHYSICAL DATA

MODELS		BP			
		036	048	060	072
EVAPORATOR BLOWER	Centrifugal Blower (Belt Drive) (Dia. x Wd. in.)	12 x 10	12 x 10	12 x 10	12 x 10
	Centrifugal Blower (Direct Drive) (Dia. x Wd. in.)	12 x 10	12 x 10	12 x 10	12 x 11
	Fan Motor HP (Direct Drive)	3/4	1	1	1
	Fan Motor HP (Belt Drive)	1 1/2	1 1/2	1 1/2	1 1/2
	Fan Motor HP (Belt Drive High Static)	1 1/2	1 1/2	2	3
EVAPORATOR COIL	Rows Deep	3	4	4	4
	Fins Per Inch	13	13	13	13
	Face Area (Sq. Ft.)	5.1	5.1	5.1	5.1
CONDENSER FANS	Propeller Dia. (in.)	24	24	24	24
	Fan Motor Hp	1/2	1/2	1/2	1/2
	Nom. CFM	4200	4200	4200	4200
CONDENSER COILS	Rows Deep	2	2	2	2
	Fins Per Inch	18	18	18	18
	Face Area (Sq. Ft.)	17.1	17.1	17.1	17.1
COMPRESSOR	Quantity	1	1	1	1
	Type	Reciprocal	Reciprocal	Scroll	Scroll
AIR FILTERS	Quantity Per Unit (15" X 20" X 1" or 2")	2	2	2	2
	Quantity Per Unit (14" X 25" X 1" or 2")	1	1	1	1
	Total Face Area (sq. ft.)	6.3	6.3	6.3	6.3
CHARGE	Refrigerant 22 (lbs./oz.)	11/12	12/8	13/4	12/0

TABLE 5: OPERATING WEIGHTS (LBS.)

MODEL SIZE				3 TON	4 TON	5 TON	6 TON
BASIC UNIT	BP			575	585	590	610
OPTIONS	Economizer			50			
	Motorized Damper			26			
	Electric Heater	5 - 7 kW		18			
		10 - 15 kW		23			
		20 - 30 kW		28			
ACCY.	Roof Curb			92			
	Barometric Relief / Fixed Air Damper			10			

TABLE 6: ELECTRICAL DATA - BP036-072 DIRECT DRIVE W/O POWERED CONVENIENCE OUTLET

Size (Tons)	Volt	Compressors (each)			OD Fan Motors (each)	Supply Blower Motor	Pwr Conv Outlet	Electric Heat Option				MCA ¹ (Amps)	Max Fuse ² / Breaker ³ Size (Amps)
		RLA	LRA	MCC				Model	kW	Stages	Amps		
036 (3.0)	208-1-60	11.5	68.0	17.5	2.3	6.0	0.0	None	-	-	-	22.7	30
								E05	4.0	1	19.2	46.7	50
								E07	5.6	1	26.9	56.3	60
								E10	8.0	1	38.5	70.8	80
								E15	11.9	2	57.2	94.2	100
								E20	15.9	2	76.4	118.2	125
	230-1-60	11.5	68.0	17.5	2.3	6.0	0.0	None	-	-	-	22.7	30
								E05	5.3	1	23.0	50.3	60
								E07	7.5	1	32.6	61.7	70
								E10	10.6	1	46.1	77.9	80
								E15	15.9	2	69.1	105.5	110
								E20	21.2	2	92.2	133.1	150
	208-3-60	8.3	68.0	13.0	2.3	6.0	0.0	None	-	-	-	18.7	25
								E05	4.0	1	11.1	32.6	35
								E07	5.6	1	15.5	38.1	40
								E10	8.0	1	22.2	46.4	50
								E15	11.9	2	33.0	60.0	60
								E20	15.9	2	44.1	73.8	80
	230-3-60	8.3	68.0	13.0	2.3	6.0	0.0	None	-	-	-	18.7	25
								E05	5.3	1	13.3	34.6	35
								E07	7.5	1	18.8	41.2	45
								E10	10.6	1	26.6	50.5	60
								E15	15.9	2	39.9	66.5	70
								E20	21.2	2	53.2	82.4	90
048 (4.0)	208-1-60	17.9	102.0	28.0	2.3	7.6	0.0	None	-	-	-	32.3	40
								E05	4.0	1	19.2	56.3	60
								E07	5.6	1	26.9	65.9	70
								E10	8.0	1	38.5	80.4	90
								E15	11.9	2	57.2	103.8	110
								E20	15.9	2	76.4	127.8	150
	230-1-60	17.9	102.0	28.0	2.3	7.6	0.0	None	-	-	-	32.3	40
								E05	5.3	1	23.0	59.9	70
								E07	7.5	1	32.6	71.3	80
								E10	10.6	1	46.1	87.5	90
								E15	15.9	2	69.1	115.1	125
								E20	21.2	2	92.2	142.7	150
	208-3-60	12.8	84.0	20.0	2.3	7.6	0.0	None	-	-	-	25.9	35
								E05	4.0	1	11.1	39.8	45
								E07	5.6	1	15.5	45.3	50
								E10	8.0	1	22.2	53.7	60
								E15	11.9	2	33.0	67.2	70
								E20	15.9	2	44.1	81.1	90
	230-3-60	12.8	84.0	20.0	2.3	7.6	0.0	None	-	-	-	25.9	35
								E05	5.3	1	13.3	41.8	50
								E07	7.5	1	18.8	48.5	50
								E10	10.6	1	26.6	57.8	60
								E15	15.9	2	39.9	73.7	80
								E20	21.2	2	53.2	89.6	90

TABLE 6: ELECTRICAL DATA - BP036-072 DIRECT DRIVE W/O POWERED CONVENIENCE OUTLET

Size (Tons)	Volt	Compressors (each)			OD Fan Motors (each)	Supply Blower Motor	Pwr Conv Outlet	Electric Heat Option				MCA ¹ (Amps)	Max Fuse ² / Breaker ³ Size (Amps)
		RLA	LRA	MCC				Model	kW	Stages	Amps		
060 (5.0)	208-1-60	25.0	150.0	39.0	2.3	7.6	0.0	None	-	-	-	41.2	50
								E05	4.0	1	19.2	65.2	80
								E07	5.6	1	26.9	74.8	90
								E10	8.0	1	38.5	89.2	100
								E15	11.9	2	57.2	112.7	125
								E20	15.9	2	76.4	136.7	150
	230-1-60	25.0	150.0	39.0	2.3	7.6	0.0	E30	22.2	2	106.7	174.6	175
								None	-	-	-	41.2	50
								E05	5.3	1	23.0	68.8	80
								E07	7.5	1	32.6	80.2	90
								E10	10.6	1	46.1	96.4	110
								E15	15.9	2	69.1	124.0	125
	208-3-60	17.3	123.0	27.0	2.3	7.6	0.0	E20	21.2	2	92.2	151.6	175
								E30	29.6	2	128.7	195.3	200
								None	-	-	-	31.5	40
								E05	4.0	1	11.1	45.4	50
								E07	5.6	1	15.5	51.0	60
								E10	8.0	1	22.2	59.3	70
	230-3-60	17.3	123.0	27.0	2.3	7.6	0.0	E15	11.9	2	33.0	72.8	80
								E20	15.9	2	44.1	86.7	90
								E30	22.2	2	61.6	108.6	110
								None	-	-	-	31.5	40
								E05	5.3	1	13.3	47.5	60
								E07	7.5	1	18.8	54.1	60
072 (6.0)	208-3-60	19.2	146.0	30.0	2.3	7.6	0.0	E10	10.6	1	26.6	63.4	70
								E15	15.9	2	39.9	79.3	80
								E20	21.2	2	53.2	95.3	100
								E30	29.6	2	74.3	120.5	125
								None	-	-	-	33.9	45
								E05	4.0	1	11.1	47.8	60
	230-3-60	19.2	146.0	30.0	2.3	7.6	0.0	E07	5.6	1	15.5	53.3	60
								E10	8.0	1	22.2	61.7	70
								E15	11.9	2	33.0	75.2	80
								E20	15.9	2	44.1	89.1	90
								E30	22.2	2	61.6	110.9	125
								None	-	-	-	33.9	45
								E05	5.3	1	13.3	49.8	60
								E07	7.5	1	18.8	56.5	70
								E10	10.6	1	26.6	65.8	70
								E15	15.9	2	39.9	81.7	90
								E20	21.2	2	53.2	97.6	100
								E30	29.6	2	74.3	122.9	125

1. Minimum Circuit Ampacity.
2. Dual Element, Time Delay Type.
3. HACR type per NEC.

TABLE 7: ELECTRICAL DATA - BP036-072 BELT DRIVE W/O POWERED CONVENIENCE OUTLET

Size (Tons)	Volt	Compressors (each)			OD Fan Motors (each)	Supply Blower Motor	Pwr Conv Outlet	Electric Heat Option				MCA ¹ (Amps)	Max Fuse ² / Breaker ³ Size (Amps)
		RLA	LRA	MCC				Model	kW	Stages	Amps		
036 (3.0)	208-1-60	11.5	68.0	17.5	2.3	7.6	0.0	None	-	-	-	24.3	30
								E05	4.0	1	19.2	48.3	50
								E07	5.6	1	26.9	57.9	60
								E10	8.0	1	38.5	72.4	80
								E15	11.9	2	57.2	95.8	100
								E20	15.9	2	76.4	119.8	125
	230-1-60	11.5	68.0	17.5	2.3	7.6	0.0	None	-	-	-	24.3	30
								E05	5.3	1	23.0	51.9	60
								E07	7.5	1	32.6	63.3	70
								E10	10.6	1	46.1	79.5	80
								E15	15.9	2	69.1	107.1	110
								E20	21.2	2	92.2	134.7	150
	208-3-60	8.3	68.0	13.0	2.3	5.2	0.0	None	-	-	-	17.9	25
								E05	4.0	1	11.1	31.8	35
								E07	5.6	1	15.5	37.3	40
								E10	8.0	1	22.2	45.6	50
								E15	11.9	2	33.0	59.2	60
								E20	15.9	2	44.1	73.0	80
	230-3-60	8.3	68.0	13.0	2.3	5.2	0.0	None	-	-	-	17.9	25
								E05	5.3	1	13.3	33.8	35
								E07	7.5	1	18.8	40.4	45
								E10	10.6	1	26.6	49.7	50
								E15	15.9	2	39.9	65.7	70
								E20	21.2	2	53.2	81.6	90
	460-3-60	5.1	34.0	8.0	1.3	2.6	0.0	None	-	-	-	10.3	15
								E07	6.8	1	8.5	20.5	25
								E10	10.1	1	12.7	25.5	30
								E15	13.6	2	17.1	30.7	35
								E20	19.5	2	24.5	39.6	40
	575-3-60	3.2	26.0	5.0	1.3	2.0	0.0	None	-	-	-	7.0	15
								E10	10.6	1	10.6	19.8	20
								E15	15.9	1	16.0	26.2	30
								E20	21.2	2	21.3	32.5	35
048 (4.0)	208-1-60	17.9	102.0	28.0	2.3	7.6	0.0	None	-	-	-	32.3	40
								E05	4.0	1	19.2	56.3	60
								E07	5.6	1	26.9	65.9	70
								E10	8.0	1	38.5	80.4	90
								E15	11.9	2	57.2	103.8	110
								E20	15.9	2	76.4	127.8	150
	230-1-60	17.9	102.0	28.0	2.3	7.6	0.0	None	-	-	-	32.3	40
								E05	5.3	1	23.0	59.9	70
								E07	7.5	1	32.6	71.3	80
								E10	10.6	1	46.1	87.5	90
								E15	15.9	2	69.1	115.1	125
								E20	21.2	2	92.2	142.7	150
	208-3-60	12.8	84.0	20.0	2.3	5.2	0.0	None	-	-	-	23.5	30
								E05	4.0	1	11.1	37.4	45
								E07	5.6	1	15.5	42.9	50
								E10	8.0	1	22.2	51.3	60
								E15	11.9	2	33.0	64.8	70
								E20	15.9	2	44.1	78.7	80
	230-3-60	12.8	84.0	20.0	2.3	5.2	0.0	None	-	-	-	23.5	30
								E05	5.3	1	13.3	39.4	45
								E07	7.5	1	18.8	46.1	50
								E10	10.6	1	26.6	55.4	60
								E15	15.9	2	39.9	71.3	80
								E20	21.2	2	53.2	87.2	90
	460-3-60	5.8	42.0	9.0	1.3	2.6	0.0	None	-	-	-	11.1	15
								E07	6.8	1	8.5	21.4	25
								E10	10.1	1	12.7	26.3	30
								E15	13.6	2	17.1	31.6	35
								E20	19.5	2	24.5	40.5	45
	575-3-60	5.1	34.0	8.0	1.3	2.0	0.0	None	-	-	-	9.4	15
								E10	10.6	1	10.6	22.2	25
								E15	15.9	1	16.0	28.5	30
								E20	21.2	2	21.3	34.9	35

TABLE 7: ELECTRICAL DATA - BP036-072 BELT DRIVE W/O POWERED CONVENIENCE OUTLET (CONT.)

Size (Tons)	Volt	Compressors (each)			OD Fan Motors (each)	Supply Blower Motor	Pwr Conv Outlet	Electric Heat Option				MCA ¹ (Amps)	Max Fuse ² / Breaker ³ Size (Amps)
		RLA	LRA	MCC				Model	kW	Stages	Amps		
060 (5.0)	208-1-60	25.0	150.0	39.0	2.3	7.6	0.0	None	-	-	-	41.2	50
								E05	4.0	1	19.2	65.2	80
								E07	5.6	1	26.9	74.8	90
								E10	8.0	1	38.5	89.2	100
								E15	11.9	2	57.2	112.7	125
								E20	15.9	2	76.4	136.7	150
	230-1-60	25.0	150.0	39.0	2.3	7.6	0.0	E30	22.2	2	106.7	174.6	175
								None	-	-	-	41.2	50
								E05	5.3	1	23.0	68.8	80
								E07	7.5	1	32.6	80.2	90
								E10	10.6	1	46.1	96.4	110
								E15	15.9	2	69.1	124.0	125
	208-3-60	17.3	123.0	27.0	2.3	5.2	0.0	E20	21.2	2	92.2	151.6	175
								E30	29.6	2	128.7	195.3	200
								None	-	-	-	29.1	35
								E05	4.0	1	11.1	43.0	50
								E07	5.6	1	15.5	48.6	60
								E10	8.0	1	22.2	56.9	60
	230-3-60	17.3	123.0	27.0	2.3	5.2	0.0	E15	11.9	2	33.0	70.4	80
								E20	15.9	2	44.1	84.3	90
								E30	22.2	2	61.6	106.2	110
								None	-	-	-	29.1	35
								E05	5.3	1	13.3	45.1	50
								E07	7.5	1	18.8	51.7	60
072 (6.0)	460-3-60	8.4	70.0	13.1	1.3	2.6	0.0	E10	10.6	1	26.6	61.0	70
								E15	15.9	2	39.9	76.9	80
								E20	21.2	2	53.2	92.9	100
								E30	29.6	2	74.3	118.1	125
								None	-	-	-	14.4	20
								E07	6.8	1	8.5	24.6	30
	575-3-60	7.0	53.0	11.0	1.3	2.0	0.0	E10	10.1	1	12.7	29.6	30
								E15	13.6	2	17.1	34.8	35
								E20	19.5	2	24.5	43.7	45
								E30	28.8	2	36.1	57.7	60
								None	-	-	-	11.8	15
								E10	10.6	1	10.6	24.5	25
072 (6.0)	208-3-60	19.2	146.0	30.0	2.3	5.2	0.0	E15	15.9	1	16.0	30.9	35
								E20	21.2	2	21.3	37.3	40
								E30	30.4	2	30.5	48.4	50
								None	-	-	-	31.5	40
								E05	4.0	1	11.1	45.4	60
								E07	5.6	1	15.5	50.9	60
	230-3-60	19.2	146.0	30.0	2.3	5.2	0.0	E10	8.0	1	22.2	59.3	70
								E15	11.9	2	33.0	72.8	80
								E20	15.9	2	44.1	86.7	90
								E30	22.2	2	61.6	108.5	110
								None	-	-	-	31.5	40
								E05	5.3	1	13.3	47.4	60
	460-3-60	8.3	73.0	13.0	1.3	2.6	0.0	E07	7.5	1	18.8	54.1	60
								E10	10.6	1	26.6	63.4	70
								E15	15.9	2	39.9	79.3	80
								E20	21.2	2	53.2	95.2	100
								E30	29.6	2	74.3	120.5	125
								None	-	-	-	14.3	20
072 (6.0)	575-3-60	7.1	60.0	11.0	1.3	2.0	0.0	E07	6.8	1	8.5	24.5	30
								E10	10.1	1	12.7	29.5	30
								E15	13.6	2	17.1	34.7	35
								E20	19.5	2	24.5	43.6	45
								E30	28.8	2	36.1	57.6	60
								None	-	-	-	11.9	15
	575-3-60	7.1	60.0	11.0	1.3	2.0	0.0	E10	10.6	1	10.6	24.7	25
								E15	15.9	1	16.0	31.0	35
								E20	21.2	2	21.3	37.4	40
								E30	30.4	2	30.5	48.5	50

1. Minimum Circuit Ampacity.
2. Dual Element, Time Delay Type.
3. HACR type per NEC.

TABLE 8: ELECTRICAL DATA - BP036-072 BELT DRIVE HIGH STATIC W/O POWERED CONVENIENCE OUTLET

Size (Tons)	Volt	Compressors (each)			OD Fan Motors (each)	Supply Blower Motor	Pwr Conv Outlet	Electric Heat Option				MCA ¹ (Amps)	Max Fuse ² / Breaker ³ Size (Amps)
		RLA	LRA	MCC	FLA	FLA	FLA	Model	kW	Stages	Amps		
036 (3.0)	208-1-60	11.5	68.0	17.5	2.3	7.6	0.0	None	-	-	-	24.3	30
								E05	4.0	1	19.2	48.3	50
								E07	5.6	1	26.9	57.9	60
								E10	8.0	1	38.5	72.4	80
								E15	11.9	2	57.2	95.8	100
								E20	15.9	2	76.4	119.8	125
	230-1-60	11.5	68.0	17.5	2.3	7.6	0.0	None	-	-	-	24.3	30
								E05	5.3	1	23.0	51.9	60
								E07	7.5	1	32.6	63.3	70
								E10	10.6	1	46.1	79.5	80
								E15	15.9	2	69.1	107.1	110
								E20	21.2	2	92.2	134.7	150
	208-3-60	8.3	68.0	13.0	2.3	5.2	0.0	None	-	-	-	17.9	25
								E05	4.0	1	11.1	31.8	35
								E07	5.6	1	15.5	37.3	40
								E10	8.0	1	22.2	45.6	50
								E15	11.9	2	33.0	59.2	60
								E20	15.9	2	44.1	73.0	80
	230-3-60	8.3	68.0	13.0	2.3	5.2	0.0	None	-	-	-	17.9	25
								E05	5.3	1	13.3	33.8	35
								E07	7.5	1	18.8	40.4	45
								E10	10.6	1	26.6	49.7	50
								E15	15.9	2	39.9	65.7	70
								E20	21.2	2	53.2	81.6	90
	460-3-60	5.1	34.0	8.0	1.3	2.6	0.0	None	-	-	-	10.3	15
								E07	6.8	1	8.5	20.5	25
								E10	10.1	1	12.7	25.5	30
								E15	13.6	2	17.1	30.7	35
								E20	19.5	2	24.5	39.6	40
	575-3-60	3.2	26.0	5.0	1.3	2.0	0.0	None	-	-	-	7.0	15
								E10	10.6	1	10.6	19.8	20
								E15	15.9	1	16.0	26.2	30
								E20	21.2	2	21.3	32.5	35

TABLE 8: ELECTRICAL DATA - BP036-072 BELT DRIVE HIGH STATIC W/O POWERED CONVENIENCE OUTLET (CONT.)

Size (Tons)	Volt	Compressors (each)			OD Fan Motors (each)	Supply Blower Motor	Pwr Conv Outlet	Electric Heat Option				MCA ¹ (Amps)	Max Fuse ² / Breaker ³ Size (Amps)
		RLA	LRA	MCC	FLA	FLA	FLA	Model	kW	Stages	Amps		
048 (4.0)	208-1-60	17.9	102.0	28.0	2.3	7.6	0.0	None	-	-	-	32.3	40
								E05	4.0	1	19.2	56.3	60
								E07	5.6	1	26.9	65.9	70
								E10	8.0	1	38.5	80.4	90
								E15	11.9	2	57.2	103.8	110
								E20	15.9	2	76.4	127.8	150
	230-1-60	17.9	102.0	28.0	2.3	7.6	0.0	None	-	-	-	32.3	40
								E05	5.3	1	23.0	59.9	70
								E07	7.5	1	32.6	71.3	80
								E10	10.6	1	46.1	87.5	90
								E15	15.9	2	69.1	115.1	125
								E20	21.2	2	92.2	142.7	150
	208-3-60	12.8	84.0	20.0	2.3	5.2	0.0	None	-	-	-	23.5	30
								E05	4.0	1	11.1	37.4	45
								E07	5.6	1	15.5	42.9	50
								E10	8.0	1	22.2	51.3	60
								E15	11.9	2	33.0	64.8	70
								E20	15.9	2	44.1	78.7	80
	230-3-60	12.8	84.0	20.0	2.3	5.2	0.0	None	-	-	-	23.5	30
								E05	5.3	1	13.3	39.4	45
								E07	7.5	1	18.8	46.1	50
								E10	10.6	1	26.6	55.4	60
								E15	15.9	2	39.9	71.3	80
								E20	21.2	2	53.2	87.2	90
	460-3-60	5.8	42.0	9.0	1.3	2.6	0.0	None	-	-	-	11.1	15
								E07	6.8	1	8.5	21.4	25
								E10	10.1	1	12.7	26.3	30
								E15	13.6	2	17.1	31.6	35
	575-3-60	5.1	34.0	8.0	1.3	2.0	0.0	E20	19.5	2	24.5	40.5	45
								None	-	-	-	9.4	15
								E10	10.6	1	10.6	22.2	25
								E15	15.9	1	16.0	28.5	30
060 (5.0)	208-3-60	17.3	123.0	27.0	2.3	8.2	0.0	E20	21.2	2	21.3	34.9	35
								None	-	-	-	32.1	40
								E05	4.0	1	11.1	46.0	60
								E07	5.6	1	15.5	51.6	60
								E10	8.0	1	22.2	59.9	70
								E15	11.9	2	33.0	73.4	80
	230-3-60	17.3	123.0	27.0	2.3	8.2	0.0	E20	15.9	2	44.1	87.3	90
								E30	22.2	2	61.6	109.2	110
								None	-	-	-	32.1	40
								E05	5.3	1	13.3	48.1	60
								E07	7.5	1	18.8	54.7	60
								E10	10.6	1	26.6	64.0	70
	460-3-60	8.4	70.0	13.1	1.3	4.1	0.0	E15	15.9	2	39.9	79.9	80
								E20	21.2	2	53.2	95.9	100
								E30	29.6	2	74.3	121.1	125
								None	-	-	-	15.9	20
								E07	6.8	1	8.5	26.1	30
								E10	10.1	1	12.7	31.1	35
	575-3-60	7.0	53.0	11.0	1.3	3.6	0.0	E15	13.6	2	17.1	36.3	40
								E20	19.5	2	24.5	45.2	50
								E30	28.8	2	36.1	59.2	60
								None	-	-	-	13.4	20
								E10	10.6	1	10.6	26.1	30
								E15	15.9	1	16.0	32.5	35
								E20	21.2	2	21.3	38.9	40
								E30	30.4	2	30.5	50.0	50

TABLE 8: ELECTRICAL DATA - BP036-072 BELT DRIVE HIGH STATIC W/O POWERED CONVENIENCE OUTLET (CONT.)

Size (Tons)	Volt	Compressors (each)			OD Fan Motors (each)	Supply Blower Motor	Pwr Conv Outlet	Electric Heat Option				MCA ¹ (Amps)	Max Fuse ² / Breaker ³ Size (Amps)
		RLA	LRA	MCC				Model	kW	Stages	Amps		
072 (6.0)	208-3-60	19.2	146.0	30.0	2.3	10.9	0.0	None	-	-	-	37.2	50
								E05	4.0	1	11.1	51.1	60
								E07	5.6	1	15.5	56.6	70
								E10	8.0	1	22.2	65.0	70
								E15	11.9	2	33.0	78.5	80
								E20	15.9	2	44.1	92.4	100
	230-3-60	19.2	146.0	30.0	2.3	10.9	0.0	E30	22.2	2	61.6	114.2	125
								None	-	-	-	37.2	50
								E05	5.3	1	13.3	53.1	60
								E07	7.5	1	18.8	59.8	70
								E10	10.6	1	26.6	69.1	80
								E15	15.9	2	39.9	85.0	90
	460-3-60	8.3	73.0	13.0	1.3	5.3	0.0	E20	21.2	2	53.2	100.9	110
								E30	29.6	2	74.3	126.2	150
								None	-	-	-	17.0	25
								E07	6.8	1	8.5	27.2	30
								E10	10.1	1	12.7	32.2	35
								E15	13.6	2	17.1	37.4	40
	575-3-60	7.1	60.0	11.0	1.3	4.1	0.0	E20	19.5	2	24.5	46.3	50
								E30	28.8	2	36.1	60.3	70
								None	-	-	-	14.0	20
								E10	10.6	1	10.6	26.8	30
								E15	15.9	1	16.0	33.1	35
								E20	21.2	2	21.3	39.5	40
								E30	30.4	2	30.5	50.6	60

1. Minimum Circuit Ampacity.
2. Dual Element, Time Delay Type.
3. HACR type per NEC.

TABLE 9: ELECTRICAL DATA - BP036-072 DIRECT DRIVE W/POWERED CONVENIENCE OUTLET

Size (Tons)	Volt	Compressors (each)			OD Fan Motors (each)	Supply Blower Motor	Pwr Conv Outlet	Electric Heat Option				MCA ¹ (Amps)	Max Fuse ² / Breaker ³ Size (Amps)
		RLA	LRA	MCC				Model	kW	Stages	Amps		
036 (3.0)	208-1-60	11.5	68.0	17.5	2.3	6.0	10.0	None	-	-	-	32.7	40
								E05	4.0	1	19.2	56.7	60
								E07	5.6	1	26.9	66.3	70
								E10	8.0	1	38.5	80.8	90
								E15	11.9	2	57.2	104.2	110
								E20	15.9	2	76.4	128.2	150
	230-1-60	11.5	68.0	17.5	2.3	6.0	10.0	None	-	-	-	32.7	40
								E05	5.3	1	23.0	60.3	70
								E07	7.5	1	32.6	71.7	80
								E10	10.6	1	46.1	87.9	90
								E15	15.9	2	69.1	115.5	125
								E20	21.2	2	92.2	143.1	150
	208-3-60	8.3	68.0	13.0	2.3	6.0	10.0	None	-	-	-	29.1	35
								E05	4.0	1	11.1	43.0	50
								E07	5.6	1	15.5	48.5	50
								E10	8.0	1	22.2	56.9	60
								E15	11.9	2	33.0	70.4	80
								E20	15.9	2	44.1	84.3	90
	230-3-60	8.3	68.0	13.0	2.3	6.0	10.0	None	-	-	-	29.1	35
								E05	5.3	1	13.3	45.0	50
								E07	7.5	1	18.8	51.7	60
								E10	10.6	1	26.6	61.0	70
								E15	15.9	2	39.9	76.9	80
								E20	21.2	2	53.2	92.8	100

TABLE 9: ELECTRICAL DATA - BP036-072 DIRECT DRIVE W/POWERED CONVENIENCE OUTLET (CONT.)

Size (Tons)	Volt	Compressors (each)			OD Fan Motors (each)	Supply Blower Motor	Pwr Conv Outlet	Electric Heat Option				MCA ¹ (Amps)	Max Fuse ² / Breaker ³ Size (Amps)
		RLA	LRA	MCC				Model	kW	Stages	Amps		
048 (4.0)	208-1-60	17.9	102.0	28.0	2.3	7.6	10.0	None	-	-	-	42.3	60
								E05	4.0	1	19.2	66.3	70
								E07	5.6	1	26.9	75.9	80
								E10	8.0	1	38.5	90.4	100
								E15	11.9	2	57.2	113.8	125
								E20	15.9	2	76.4	137.8	150
	230-1-60	17.9	102.0	28.0	2.3	7.6	10.0	None	-	-	-	42.3	60
								E05	5.3	1	23.0	69.9	80
								E07	7.5	1	32.6	81.3	90
								E10	10.6	1	46.1	97.5	100
								E15	15.9	2	69.1	125.1	150
								E20	21.2	2	92.2	152.7	175
	208-3-60	12.8	84.0	20.0	2.3	7.6	10.0	None	-	-	-	35.9	45
								E05	4.0	1	11.1	49.8	50
								E07	5.6	1	15.5	55.3	60
								E10	8.0	1	22.2	63.7	70
								E15	11.9	2	33.0	77.2	80
								E20	15.9	2	44.1	91.1	100
	230-3-60	12.8	84.0	20.0	2.3	7.6	10.0	None	-	-	-	35.9	45
								E05	5.3	1	13.3	51.8	60
								E07	7.5	1	18.8	58.5	60
								E10	10.6	1	26.6	67.8	70
								E15	15.9	2	39.9	83.7	90
								E20	21.2	2	53.2	99.6	100
060 (5.0)	208-1-60	25.0	150.0	39.0	2.3	7.6	10.0	None	-	-	-	51.2	70
								E05	4.0	1	19.2	75.2	90
								E07	5.6	1	26.9	84.8	100
								E10	8.0	1	38.5	99.2	110
								E15	11.9	2	57.2	122.7	125
								E20	15.9	2	76.4	146.7	150
	230-1-60	25.0	150.0	39.0	2.3	7.6	10.0	None	-	-	-	51.2	70
								E05	5.3	1	23.0	78.8	90
								E07	7.5	1	32.6	90.2	100
								E10	10.6	1	46.1	106.4	110
								E15	15.9	2	69.1	134.0	150
								E20	21.2	2	92.2	161.6	175
	208-3-60	17.3	123.0	27.0	2.3	7.6	10.0	None	-	-	-	41.5	50
								E05	4.0	1	11.1	55.4	60
								E07	5.6	1	15.5	61.0	70
								E10	8.0	1	22.2	69.3	80
								E15	11.9	2	33.0	82.8	90
								E20	15.9	2	44.1	96.7	100
	230-3-60	17.3	123.0	27.0	2.3	7.6	10.0	None	-	-	-	41.5	50
								E05	5.3	1	13.3	57.5	70
								E07	7.5	1	18.8	64.1	70
								E10	10.6	1	26.6	73.4	80
								E15	15.9	2	39.9	89.3	90
								E20	21.2	2	53.2	105.3	110
072 (6.0)	208-3-60	19.2	146.0	30.0	2.3	7.6	10.0	None	-	-	-	43.9	60
								E05	4.0	1	11.1	57.8	70
								E07	5.6	1	15.5	63.3	70
								E10	8.0	1	22.2	71.7	80
								E15	11.9	2	33.0	85.2	90
								E20	15.9	2	44.1	99.1	100
	230-3-60	19.2	146.0	30.0	2.3	7.6	10.0	None	-	-	-	43.9	60
								E05	5.3	1	13.3	59.8	70
								E07	7.5	1	18.8	66.5	80
								E10	10.6	1	26.6	75.8	80
								E15	15.9	2	39.9	91.7	100
								E20	21.2	2	53.2	107.6	110
								E30	29.6	2	74.3	132.9	150

1. Minimum Circuit Ampacity.
2. Dual Element, Time Delay Type.
3. HACR type per NEC.

TABLE 10: ELECTRICAL DATA - BP036-072 BELT DRIVE W/POWERED CONVENIENCE OUTLET

Size (Tons)	Volt	Compressors (each)			OD Fan Motors (each)	Supply Blower Motor	Pwr Conv Outlet	Electric Heat Option				MCA ¹ (Amps)	Max Fuse ² / Breaker ³ Size (Amps)
		RLA	LRA	MCC				Model	kW	Stages	Amps		
036 (3.0)	208-1-60	11.5	68.0	17.5	2.3	7.6	10.0	None	-	-	-	34.3	45
								E05	4.0	1	19.2	58.3	60
								E07	5.6	1	26.9	67.9	70
								E10	8.0	1	38.5	82.4	90
								E15	11.9	2	57.2	105.8	110
								E20	15.9	2	76.4	129.8	150
	230-1-60	11.5	68.0	17.5	2.3	7.6	10.0	None	-	-	-	34.3	45
								E05	5.3	1	23.0	61.9	70
								E07	7.5	1	32.6	73.3	80
								E10	10.6	1	46.1	89.5	90
								E15	15.9	2	69.1	117.1	125
								E20	21.2	2	92.2	144.7	150
	208-3-60	8.3	68.0	13.0	2.3	5.2	10.0	None	-	-	-	28.3	35
								E05	4.0	1	11.1	42.2	45
								E07	5.6	1	15.5	47.7	50
								E10	8.0	1	22.2	56.1	60
								E15	11.9	2	33.0	69.6	70
								E20	15.9	2	44.1	83.5	90
	230-3-60	8.3	68.0	13.0	2.3	5.2	10.0	None	-	-	-	28.3	35
								E05	5.3	1	13.3	44.2	50
								E07	7.5	1	18.8	50.9	60
								E10	10.6	1	26.6	60.2	70
								E15	15.9	2	39.9	76.1	80
								E20	21.2	2	53.2	92.0	100
	460-3-60	5.1	34.0	8.0	1.3	2.6	5.0	None	-	-	-	15.3	20
								E07	6.8	1	8.5	25.5	30
								E10	10.1	1	12.7	30.5	35
								E15	13.6	2	17.1	35.7	40
								E20	19.5	2	24.5	44.6	45
	575-3-60	3.2	26.0	5.0	1.3	2.0	4.0	None	-	-	-	11.2	15
								E10	10.6	1	10.6	24.0	25
								E15	15.9	1	16.0	30.4	35
								E20	21.2	2	21.3	36.7	40
048 (4.0)	208-1-60	17.9	102.0	28.0	2.3	7.6	10.0	None	-	-	-	42.3	60
								E05	4.0	1	19.2	66.3	70
								E07	5.6	1	26.9	75.9	80
								E10	8.0	1	38.5	90.4	100
								E15	11.9	2	57.2	113.8	125
								E20	15.9	2	76.4	137.8	150
	230-1-60	17.9	102.0	28.0	2.3	7.6	10.0	None	-	-	-	42.3	60
								E05	5.3	1	23.0	69.9	80
								E07	7.5	1	32.6	81.3	90
								E10	10.6	1	46.1	97.5	100
								E15	15.9	2	69.1	125.1	150
								E20	21.2	2	92.2	152.7	175
	208-3-60	12.8	84.0	20.0	2.3	5.2	10.0	None	-	-	-	33.5	45
								E05	4.0	1	11.1	47.4	50
								E07	5.6	1	15.5	52.9	60
								E10	8.0	1	22.2	61.3	70
								E15	11.9	2	33.0	74.8	80
								E20	15.9	2	44.1	88.7	90
	230-3-60	12.8	84.0	20.0	2.3	5.2	10.0	None	-	-	-	33.5	45
								E05	5.3	1	13.3	49.4	50
								E07	7.5	1	18.8	56.1	60
								E10	10.6	1	26.6	65.4	70
								E15	15.9	2	39.9	81.3	90
								E20	21.2	2	53.2	97.2	100
	460-3-60	5.8	42.0	9.0	1.3	2.6	5.0	None	-	-	-	16.1	20
								E07	6.8	1	8.5	26.4	30
								E10	10.1	1	12.7	31.3	35
								E15	13.6	2	17.1	36.6	40
								E20	19.5	2	24.5	45.5	50
	575-3-60	5.1	34.0	8.0	1.3	2.0	4.0	None	-	-	-	13.4	15
								E10	10.6	1	10.6	26.2	30
								E15	15.9	1	16.0	32.5	35
								E20	21.2	2	21.3	38.9	40

TABLE 10: ELECTRICAL DATA - BP036-072 BELT DRIVE W/POWERED CONVENIENCE OUTLET (CONT.)

Size (Tons)	Volt	Compressors (each)			OD Fan Motors (each)	Supply Blower Motor	Pwr Conv Outlet	Electric Heat Option				MCA ¹ (Amps)	Max Fuse ² / Breaker ³ Size (Amps)
		RLA	LRA	MCC	FLA	FLA	FLA	Model	kW	Stages	Amps		
060 (5.0)	208-1-60	25.0	150.0	39.0	2.3	7.6	10.0	None	-	-	-	51.2	70
								E05	4.0	1	19.2	75.2	90
								E07	5.6	1	26.9	84.8	100
								E10	8.0	1	38.5	99.2	110
								E15	11.9	2	57.2	122.7	125
								E20	15.9	2	76.4	146.7	150
	230-1-60	25.0	150.0	39.0	2.3	7.6	10.0	E30	22.2	2	106.7	184.6	200
								None	-	-	-	51.2	70
								E05	5.3	1	23.0	78.8	90
								E07	7.5	1	32.6	90.2	100
								E10	10.6	1	46.1	106.4	110
								E15	15.9	2	69.1	134.0	150
	208-3-60	17.3	123.0	27.0	2.3	5.2	10.0	E20	21.2	2	92.2	161.6	175
								E30	29.6	2	128.7	205.3	225
								None	-	-	-	39.1	50
								E05	4.0	1	11.1	53.0	60
								E07	5.6	1	15.5	58.6	70
								E10	8.0	1	22.2	66.9	70
	230-3-60	17.3	123.0	27.0	2.3	5.2	10.0	E15	11.9	2	33.0	80.4	90
								E20	15.9	2	44.1	94.3	100
								E30	22.2	2	61.6	116.2	125
								None	-	-	-	39.1	50
								E05	5.3	1	13.3	55.1	60
								E07	7.5	1	18.8	61.7	70
	460-3-60	8.4	70.0	13.1	1.3	2.6	5.0	E10	10.6	1	26.6	71.0	80
								E15	15.9	2	39.9	86.9	90
								E20	21.2	2	53.2	102.9	110
								E30	29.6	2	74.3	128.1	150
								None	-	-	-	19.4	25
								E07	6.8	1	8.5	29.6	35
	575-3-60	7.0	53.0	11.0	1.3	2.0	4.0	E10	10.1	1	12.7	34.6	35
								E15	13.6	2	17.1	39.8	40
								E20	19.5	2	24.5	48.7	50
								E30	28.8	2	36.1	62.7	70
								None	-	-	-	15.8	20
								E10	10.6	1	10.6	28.5	30
072 (6.0)	208-3-60	19.2	146.0	30.0	2.3	5.2	10.0	E15	15.9	1	16.0	34.9	35
								E20	21.2	2	21.3	41.3	45
								E30	30.4	2	30.5	52.4	60
								None	-	-	-	41.5	60
								E05	4.0	1	11.1	55.4	70
								E07	5.6	1	15.5	60.9	70
	230-3-60	19.2	146.0	30.0	2.3	5.2	10.0	E10	8.0	1	22.2	69.3	80
								E15	11.9	2	33.0	82.8	90
								E20	15.9	2	44.1	96.7	100
								E30	22.2	2	61.6	118.5	125
								None	-	-	-	41.5	60
								E05	5.3	1	13.3	57.4	70
	460-3-60	8.3	73.0	13.0	1.3	2.6	5.0	E07	7.5	1	18.8	64.1	70
								E10	10.6	1	26.6	73.4	80
								E15	15.9	2	39.9	89.3	90
								E20	21.2	2	53.2	105.2	110
								E30	29.6	2	74.3	130.5	150
								None	-	-	-	19.3	25
	575-3-60	7.1	60.0	11.0	1.3	2.0	4.0	E07	6.8	1	8.5	29.5	35
								E10	10.1	1	12.7	34.5	35
								E15	13.6	2	17.1	39.7	40
								E20	19.5	2	24.5	48.6	50
								E30	28.8	2	36.1	62.6	70
								None	-	-	-	15.9	20
E10								10.6	1	10.6	28.7	30	
E15								15.9	1	16.0	35.0	40	
							E20	21.2	2	21.3	41.4	45	
							E30	30.4	2	30.5	52.5	60	

1. Minimum Circuit Ampacity.
2. Dual Element, Time Delay Type.
3. HACR type per NEC.

TABLE 11: ELECTRICAL DATA - BP036-072 BELT DRIVE HIGH STATIC W/POWERED CONVENIENCE OUTLET

Size (Tons)	Volt	Compressors (each)			OD Fan Motors (each)	Supply Blower Motor	Pwr Conv Outlet	Electric Heat Option				MCA ¹ (Amps)	Max Fuse ² / Breaker ³ Size (Amps)
		RLA	LRA	MCC	FLA	FLA	FLA	Model	kW	Stages	Amps		
036 (3.0)	208-1-60	11.5	68.0	17.5	2.3	7.6	10.0	None	-	-	-	34.3	45
								E05	4.0	1	19.2	58.3	60
								E07	5.6	1	26.9	67.9	70
								E10	8.0	1	38.5	82.4	90
								E15	11.9	2	57.2	105.8	110
								E20	15.9	2	76.4	129.8	150
	230-1-60	11.5	68.0	17.5	2.3	7.6	10.0	None	-	-	-	34.3	45
								E05	5.3	1	23.0	61.9	70
								E07	7.5	1	32.6	73.3	80
								E10	10.6	1	46.1	89.5	90
								E15	15.9	2	69.1	117.1	125
								E20	21.2	2	92.2	144.7	150
	208-3-60	8.3	68.0	13.0	2.3	5.2	10.0	None	-	-	-	28.3	35
								E05	4.0	1	11.1	42.2	45
								E07	5.6	1	15.5	47.7	50
								E10	8.0	1	22.2	56.1	60
								E15	11.9	2	33.0	69.6	70
								E20	15.9	2	44.1	83.5	90
	230-3-60	8.3	68.0	13.0	2.3	5.2	10.0	None	-	-	-	28.3	35
								E05	5.3	1	13.3	44.2	50
								E07	7.5	1	18.8	50.9	60
								E10	10.6	1	26.6	60.2	70
								E15	15.9	2	39.9	76.1	80
								E20	21.2	2	53.2	92.0	100
	460-3-60	5.1	34.0	8.0	1.3	2.6	5.0	None	-	-	-	15.3	20
								E07	6.8	1	8.5	25.5	30
								E10	10.1	1	12.7	30.5	35
								E15	13.6	2	17.1	35.7	40
								E20	19.5	2	24.5	44.6	45
	575-3-60	3.2	26.0	5.0	1.3	2.0	4.0	None	-	-	-	11.2	15
								E10	10.6	1	10.6	24.0	25
								E15	15.9	1	16.0	30.4	35
								E20	21.2	2	21.3	36.7	40
048 (4.0)	208-1-60	17.9	102.0	28.0	2.3	7.6	10.0	None	-	-	-	42.3	60
								E05	4.0	1	19.2	66.3	70
								E07	5.6	1	26.9	75.9	80
								E10	8.0	1	38.5	90.4	100
								E15	11.9	2	57.2	113.8	125
								E20	15.9	2	76.4	137.8	150
	230-1-60	17.9	102.0	28.0	2.3	7.6	10.0	None	-	-	-	42.3	60
								E05	5.3	1	23.0	69.9	80
								E07	7.5	1	32.6	81.3	90
								E10	10.6	1	46.1	97.5	100
								E15	15.9	2	69.1	125.1	150
								E20	21.2	2	92.2	152.7	175
	208-3-60	12.8	84.0	20.0	2.3	5.2	10.0	None	-	-	-	33.5	45
								E05	4.0	1	11.1	47.4	50
								E07	5.6	1	15.5	52.9	60
								E10	8.0	1	22.2	61.3	70
								E15	11.9	2	33.0	74.8	80
								E20	15.9	2	44.1	88.7	90
	230-3-60	12.8	84.0	20.0	2.3	5.2	10.0	None	-	-	-	33.5	45
								E05	5.3	1	13.3	49.4	50
								E07	7.5	1	18.8	56.1	60
								E10	10.6	1	26.6	65.4	70
								E15	15.9	2	39.9	81.3	90
								E20	21.2	2	53.2	97.2	100
	460-3-60	5.8	42.0	9.0	1.3	2.6	5.0	None	-	-	-	16.1	20
								E07	6.8	1	8.5	26.4	30
								E10	10.1	1	12.7	31.3	35
								E15	13.6	2	17.1	36.6	40
								E20	19.5	2	24.5	45.5	50
	575-3-60	5.1	34.0	8.0	1.3	2.0	4.0	None	-	-	-	13.4	15
								E10	10.6	1	10.6	26.2	30
								E15	15.9	1	16.0	32.5	35
								E20	21.2	2	21.3	38.9	40

TABLE 11: ELECTRICAL DATA - BP036-072 BELT DRIVE HIGH STATIC W/POWERED CONVENIENCE OUTLET (CONT.)

Size (Tons)	Volt	Compressors (each)			OD Fan Motors (each)	Supply Blower Motor	Pwr Conv Outlet	Electric Heat Option				MCA ¹ (Amps)	Max Fuse ² / Breaker ³ Size (Amps)
		RLA	LRA	MCC				Model	kW	Stages	Amps		
060 (5.0)	208-3-60	17.3	123.0	27.0	2.3	8.2	10.0	None	-	-	-	42.1	50
								E05	4.0	1	11.1	56.0	70
								E07	5.6	1	15.5	61.6	70
								E10	8.0	1	22.2	69.9	80
								E15	11.9	2	33.0	83.4	90
								E20	15.9	2	44.1	97.3	100
	230-3-60	17.3	123.0	27.0	2.3	8.2	10.0	E30	22.2	2	61.6	119.2	125
								None	-	-	-	42.1	50
								E05	5.3	1	13.3	58.1	70
								E07	7.5	1	18.8	64.7	70
								E10	10.6	1	26.6	74.0	80
								E15	15.9	2	39.9	89.9	90
	460-3-60	8.4	70.0	13.1	1.3	4.1	5.0	E20	21.2	2	53.2	105.9	110
								E30	29.6	2	74.3	131.1	150
								None	-	-	-	20.9	25
								E07	6.8	1	8.5	31.1	35
								E10	10.1	1	12.7	36.1	40
								E15	13.6	2	17.1	41.3	45
072 (6.0)	575-3-60	7.0	53.0	11.0	1.3	3.6	4.0	E20	19.5	2	24.5	50.2	60
								E30	28.8	2	36.1	64.2	70
								None	-	-	-	17.4	20
								E10	10.6	1	10.6	30.1	35
								E15	15.9	1	16.0	36.5	40
								E20	21.2	2	21.3	42.9	45
	208-3-60	19.2	146.0	30.0	2.3	10.9	10.0	E30	30.4	2	30.5	54.0	60
								None	-	-	-	47.2	60
								E05	4.0	1	11.1	61.1	70
								E07	5.6	1	15.5	66.6	80
								E10	8.0	1	22.2	75.0	80
								E15	11.9	2	33.0	88.5	90
	230-3-60	19.2	146.0	30.0	2.3	10.9	10.0	E20	15.9	2	44.1	102.4	110
								E30	22.2	2	61.6	124.2	125
								None	-	-	-	47.2	60
								E05	5.3	1	13.3	63.1	70
								E07	7.5	1	18.8	69.8	80
								E10	10.6	1	26.6	79.1	90
	460-3-60	8.3	73.0	13.0	1.3	5.3	5.0	E15	15.9	2	39.9	95.0	100
								E20	21.2	2	53.2	110.9	125
								E30	29.6	2	74.3	136.2	150
								None	-	-	-	22.0	30
								E07	6.8	1	8.5	32.2	35
								E10	10.1	1	12.7	37.2	40
	575-3-60	7.1	60.0	11.0	1.3	4.1	4.0	E15	13.6	2	17.1	42.4	45
								E20	19.5	2	24.5	51.3	60
								E30	28.8	2	36.1	65.3	70
								None	-	-	-	18.0	25
								E10	10.6	1	10.6	30.8	35
								E15	15.9	1	16.0	37.1	40
	208-3-60	19.2	146.0	30.0	2.3	10.9	10.0	E20	21.2	2	21.3	43.5	45
								E30	30.4	2	30.5	54.6	60
								None	-	-	-	47.2	60
								E05	4.0	1	11.1	61.1	70
								E07	5.6	1	15.5	66.6	80
								E10	8.0	1	22.2	75.0	80

1. Minimum Circuit Ampacity.
2. Dual Element, Time Delay Type.
3. HACR type per NEC.


TABLE 12: ELECTRIC HEAT CORRECTION FACTORS

NOMINAL VOLTAGE	VOLTAGE	KW CAP. MULTIPLIER
208	208	0.75
240	230	0.92
480	460	0.92
600	575	0.92

TABLE 13: VOLTAGE LIMITATIONS¹

POWER SUPPLY	VOLTAGE	
	MIN.	MAX.
208/230-1-60	187	253
208/230-3-60	187	253
460-3-60	414	506
575-3-60	518	630

1. Utilization Range "A" in accordance with ARI Standard 110.

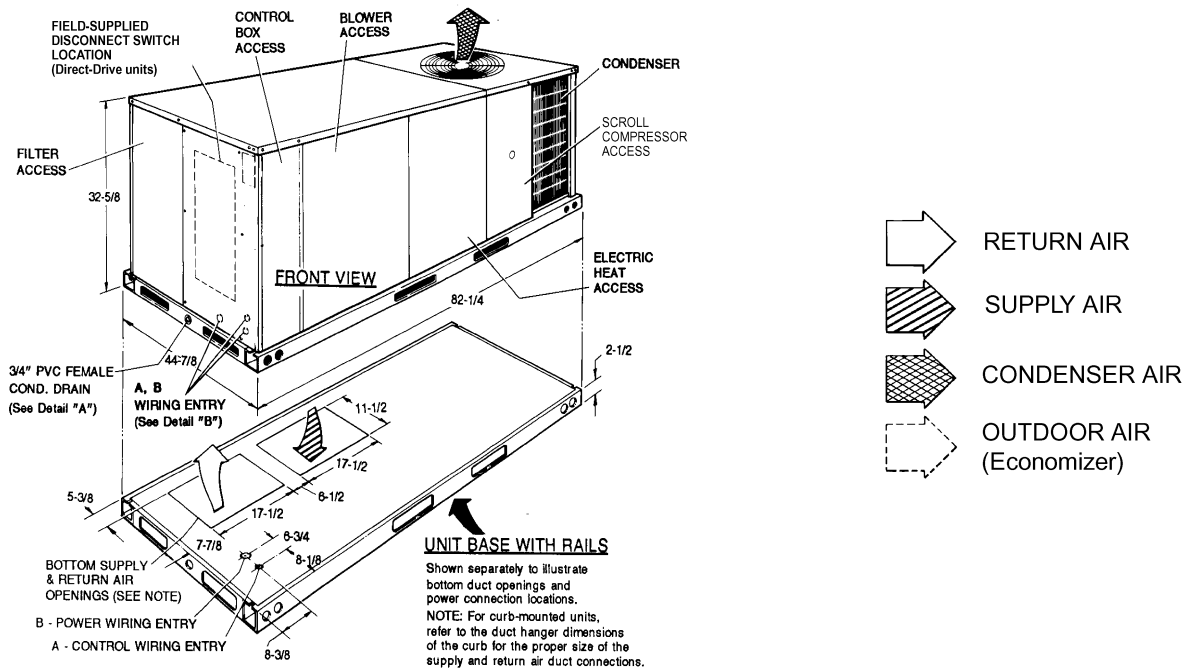**FIGURE 7 - UNIT DIMENSIONS FRONT VIEW**

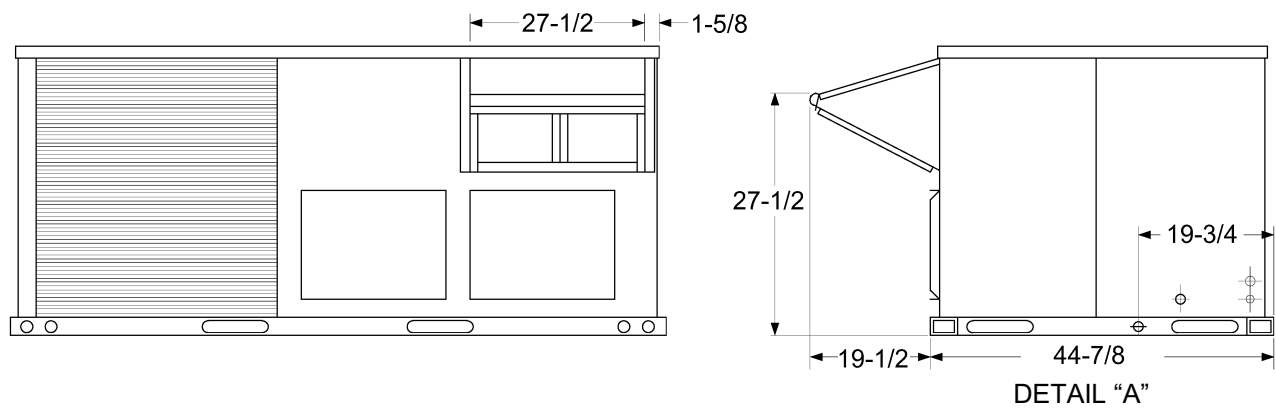


FIGURE 8 - UNIT WITH ECONOMIZER RAINHOOD

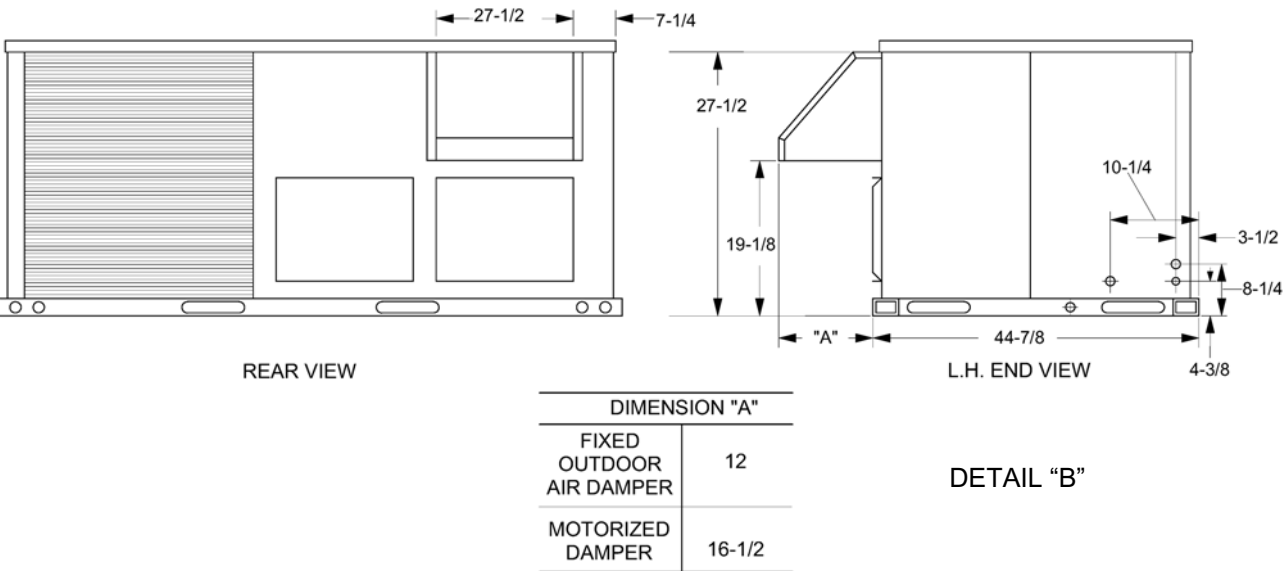


FIGURE 9 - UNIT WITH FIXED OUTDOOR AIR/MOTORIZED DAMPER RAINHOOD



5. Replace the filter access panel.



HOLE	OPENING SIZE (DIA.)	USED FOR	
A	7/8" KO ¹	Control Wiring ²	Side
			Bottom
B	2" KO ¹	Power Wiring	Side
			Bottom

- ### TABLE 15: MINIMUM CLEARANCES

LOCATION	CLEARANCE
Front	24" (Cooling/Electric Heat) 32" (Gas Heat)
Rear	12" (Less Economizer) 36" (With Economizer or Fixed Air/Motorized Damper)
Left Side (Filter Access)	24" (Less Economizer) 36" (With Economizer)
Right Side (Cond. Coil)	24"
Below Unit ¹	0"
Above Unit ²	72" (For Condenser Air Discharge)

1. Units may be installed on combustible floors made from wood or class A, B, or C roof covering material.
2. Units must be installed outdoors. Overhanging structures or shrubs should not obstruct condenser air discharge outlet.

TABLE 16: SUPPLY AIR BLOWER PERFORMANCE (BP036 BELT DRIVE) - SIDE DUCT APPLICATION

Air Flow (CFM)	Available External Static Pressure - IWG ¹																			
	0.2		0.4		0.6		0.8		1.0		1.2		1.4		1.6		1.8		2.0	
	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP
	Field Supplied Drive				Standard Drive Option								High Static Drive Option							
800	633	0.37	734	0.41	828	0.47	914	0.54	994	0.61	1069	0.69	1139	0.77	1205	0.85	1268	0.94	1328	1.03
1000	656	0.41	757	0.46	851	0.52	937	0.58	1017	0.66	1092	0.73	1162	0.81	1228	0.90	1291	0.99	1351	1.08
1200	680	0.47	781	0.52	874	0.58	960	0.65	1041	0.72	1115	0.80	1185	0.88	1251	0.96	1314	1.05	1375	1.14
1400	706	0.56	807	0.61	901	0.67	987	0.73	1067	0.80	1142	0.88	1212	0.96	1278	1.05	1341	1.13	1401	1.22
1600	737	0.67	839	0.72	932	0.77	1018	0.84	1098	0.91	1173	0.99	1243	1.07	1309	1.15	1372	1.24	1433	1.33
																				FS ⁴

1. Blower performance includes 1" filters. See STATIC RESISTANCE table for additional applications.
2. See RPM SELECTION table to determine desired motor sheave setting and to determine the maximum continuous BHP.
3. kW = BHP x 0.932.
4. Field Supplied Drive.

TABLE 17: SUPPLY AIR BLOWER PERFORMANCE (BP036 BELT DRIVE) - BOTTOM DUCT APPLICATION

Air Flow (CFM)	Available External Static Pressure - IWG ¹																			
	0.2		0.4		0.6		0.8		1.0		1.2		1.4		1.6		1.8		2.0	
	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP
	Field Supplied Drive				Standard Drive Option								Hlgh Static Drive Option							
800	612	0.38	722	0.43	824	0.48	918	0.55	1006	0.61	1087	0.69	1163	0.77	1235	0.85	1304	0.94	1370	1.02
1000	638	0.42	748	0.47	849	0.53	944	0.59	1031	0.66	1112	0.74	1188	0.82	1260	0.90	1329	0.98	1395	1.07
1200	663	0.48	773	0.53	875	0.59	969	0.65	1056	0.72	1138	0.80	1214	0.88	1286	0.96	1354	1.04	1420	1.13
1400	692	0.57	802	0.61	904	0.67	998	0.73	1085	0.80	1167	0.88	1243	0.96	1315	1.04	1383	1.13	1449	1.21
1600	726	0.67	836	0.72	938	0.78	1032	0.84	1119	0.91	1201	0.98	1277	1.06	1349	1.15	1417	1.23	1483	1.32
																				FS ⁴

1. Blower performance includes 1" filters. See STATIC RESISTANCE table for additional applications.
2. See RPM SELECTION table to determine desired motor sheave setting and to determine the maximum continuous BHP.
3. kW = BHP x 0.932.
4. Field Supplied Drive.

TABLE 18: SUPPLY AIR BLOWER PERFORMANCE (BP048 BELT DRIVE) - SIDE DUCT APPLICATION

Air Flow (CFM)	Available External Static Pressure - IWG ¹																			
	0.2		0.4		0.6		0.8		1.0		1.2		1.4		1.6		1.8		2.0	
	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP
	Field Supplied Drive						Standard Drive Option								High Static Drive Option					
1000	699	0.42	782	0.49	862	0.56	939	0.64	1012	0.73	1083	0.82	1151	0.91	1217	1.01	1280	1.11	1341	1.21
1200	727	0.45	810	0.52	889	0.60	966	0.68	1040	0.76	1110	0.85	1179	0.95	1244	1.04	1308	1.14	1369	1.24
1400	759	0.51	842	0.58	922	0.65	998	0.73	1072	0.82	1143	0.91	1211	1.00	1276	1.10	1340	1.20	1401	1.30
1600	795	0.60	878	0.67	958	0.74	1035	0.82	1108	0.91	1179	1.00	1247	1.09	1313	1.19	1376	1.28	1438	1.39
1800	836	0.72	919	0.79	999	0.87	1075	0.95	1149	1.03	1220	1.12	1288	1.22	1353	1.31	1417	1.41	1478	1.51
2000	880	0.89	963	0.96	1042	1.04	1119	1.12	1193	1.20	1263	1.29	1331	1.39	1397	1.48	1460	1.58	1522	1.68

1. Blower performance includes 1" filters. See STATIC RESISTANCE table for additional applications.
2. See RPM SELECTION table to determine desired motor sheave setting and to determine the maximum continuous BHP.
3. kW = BHP x 0.932.

TABLE 19: SUPPLY AIR BLOWER PERFORMANCE (BP048 BELT DRIVE) - BOTTOM DUCT APPLICATION

Air Flow (CFM)	Available External Static Pressure - IWG ¹																			
	0.2		0.4		0.6		0.8		1.0		1.2		1.4		1.6		1.8		2.0	
	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP
	Field Supplied Drive						Standard Drive Option								High Static Drive Option					
1000	685	0.43	775	0.50	862	0.57	945	0.65	1025	0.73	1103	0.82	1177	0.91	1248	1.00	1317	1.10	1384	1.20
1200	714	0.46	805	0.53	892	0.60	975	0.68	1055	0.76	1132	0.85	1207	0.94	1278	1.04	1347	1.13	1414	1.23
1400	749	0.52	840	0.58	927	0.66	1010	0.74	1090	0.82	1167	0.91	1242	1.00	1313	1.09	1382	1.19	1449	1.29
1600	789	0.60	880	0.67	967	0.74	1050	0.82	1130	0.91	1207	0.99	1282	1.08	1353	1.18	1422	1.27	1489	1.37
1800	833	0.73	924	0.80	1011	0.87	1094	0.95	1174	1.03	1251	1.12	1326	1.21	1397	1.30	1466	1.40	1533	1.50
2000	881	0.89	971	0.96	1058	1.03	1142	1.11	1222	1.20	1299	1.28	1373	1.37	1445	1.47	1514	1.57	1580	1.66
																				FS ⁴

1. Blower performance includes 1" filters. See STATIC RESISTANCE table for additional applications.
2. See RPM SELECTION table to determine desired motor sheave setting and to determine the maximum continuous BHP.
3. kW = BHP x 0.932.
4. Field Supplied Drive.

TABLE 20: SUPPLY AIR BLOWER PERFORMANCE (BP060 BELT DRIVE) - SIDE DUCT APPLICATION

Air Flow (CFM)	Available External Static Pressure - IWG ¹																			
	0.2		0.4		0.6		0.8		1.0		1.2		1.4		1.6		1.8		2.0	
	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP
	Field Supplied Drive						Standard Drive Option								Hlgh Static Drive Option					
1200	727	0.45	810	0.52	889	0.60	966	0.68	1040	0.76	1110	0.85	1179	0.95	1244	1.04	1308	1.14	1369	1.24
1400	759	0.51	842	0.58	922	0.65	998	0.73	1072	0.82	1143	0.91	1211	1.00	1276	1.10	1340	1.20	1401	1.30
1600	795	0.60	878	0.67	958	0.74	1035	0.82	1108	0.91	1179	1.00	1247	1.09	1313	1.19	1376	1.28	1438	1.39
1800	836	0.72	919	0.79	999	0.87	1075	0.95	1149	1.03	1220	1.12	1288	1.22	1353	1.31	1417	1.41	1478	1.51
2000	880	0.89	963	0.96	1042	1.04	1119	1.12	1193	1.20	1263	1.29	1331	1.39	1397	1.48	1460	1.58	1522	1.68
2200	926	1.10	1009	1.17	1089	1.25	1166	1.33	1239	1.41	1310	1.50	1378	1.60	1444	1.69	1507	1.79	1568	1.89
2400	976	1.35	1059	1.42	1138	1.50	1215	1.58	1289	1.66	1359	1.75	1428	1.85	1493	1.94	1557	2.04	1618	2.14
2600	1028	1.64	1111	1.71	1190	1.78	1267	1.87	1340	1.95	1411	2.04	1479	2.13	1545	2.23	1608	2.33	-	-

1. Blower performance includes 1" filters. See STATIC RESISTANCE table for additional applications.
2. See RPM SELECTION table to determine desired motor sheave setting and to determine the maximum continuous BHP.
3. kW = BHP x 0.932.

TABLE 21: SUPPLY AIR BLOWER PERFORMANCE (BP060 BELT DRIVE) - BOTTOM DUCT APPLICATION

Air Flow (CFM)	Available External Static Pressure - IWG ¹																			
	0.2		0.4		0.6		0.8		1.0		1.2		1.4		1.6		1.8		2.0	
	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP
	Field Supplied Drive						Standard Drive Option						Hgh Static Drive Option							
1200	714	0.46	805	0.53	892	0.60	975	0.68	1055	0.76	1132	0.85	1207	0.94	1278	1.04	1347	1.13	1414	1.23
1400	749	0.52	840	0.58	927	0.66	1010	0.74	1090	0.82	1167	0.91	1242	1.00	1313	1.09	1382	1.19	1449	1.29
1600	789	0.60	880	0.67	967	0.74	1050	0.82	1130	0.91	1207	0.99	1282	1.08	1353	1.18	1422	1.27	1489	1.37
1800	833	0.73	924	0.80	1011	0.87	1094	0.95	1174	1.03	1251	1.12	1326	1.21	1397	1.30	1466	1.40	1533	1.50
2000	881	0.89	971	0.96	1058	1.03	1142	1.11	1222	1.20	1299	1.28	1373	1.37	1445	1.47	1514	1.57	1580	1.66
2200	932	1.10	1022	1.17	1109	1.24	1193	1.32	1273	1.40	1350	1.49	1424	1.58	1496	1.67	1565	1.77	1631	1.87
2400	986	1.34	1076	1.41	1163	1.48	1246	1.56	1327	1.64	1404	1.73	1478	1.82	1550	1.92	1619	2.01	1685	2.11
2600	1042	1.62	1132	1.69	1219	1.76	1303	1.84	1383	1.92	1460	2.01	1534	2.10	1606	2.20	1675	2.29	-	-
																				Field Supplied Drive

1. Blower performance includes 1" filters. See STATIC RESISTANCE table for additional applications.
2. See RPM SELECTION table to determine desired motor sheave setting and to determine the maximum continuous BHP.
3. kW = BHP x 0.932.

TABLE 22: SUPPLY AIR BLOWER PERFORMANCE (BP072 BELT DRIVE) - SIDE DUCT APPLICATION

Air Flow (CFM)	Available External Static Pressure - IWG ¹																			
	0.2		0.4		0.6		0.8		1.0		1.2		1.4		1.6		1.8		2.0	
	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP
	Field Supplied Drive				Standard Drive Option								High Static Drive Option							
1600	795	0.60	878	0.67	958	0.74	1035	0.82	1108	0.91	1179	1.00	1247	1.09	1313	1.19	1376	1.28	1438	1.39
1800	836	0.72	919	0.79	999	0.87	1075	0.95	1149	1.03	1220	1.12	1288	1.22	1353	1.31	1417	1.41	1478	1.51
2000	880	0.89	963	0.96	1042	1.04	1119	1.12	1193	1.20	1263	1.29	1331	1.39	1397	1.48	1460	1.58	1522	1.68
2200	926	1.10	1009	1.17	1089	1.25	1166	1.33	1239	1.41	1310	1.50	1378	1.60	1444	1.69	1507	1.79	1568	1.89
2400	976	1.35	1059	1.42	1138	1.50	1215	1.58	1289	1.66	1359	1.75	1428	1.85	1493	1.94	1557	2.04	1618	2.14
2600	1028	1.64	1111	1.71	1190	1.78	1267	1.87	1340	1.95	1411	2.04	1479	2.13	1545	2.23	1608	2.33	1670	2.43
2800	1082	1.96	1165	2.03	1244	2.11	1321	2.19	1394	2.27	1465	2.36	1533	2.46	1599	2.55	1662	2.65	1724	2.75
3000	1138	2.32	1221	2.39	1300	2.47	1377	2.55	1451	2.63	1521	2.72	1589	2.81	1655	2.91	1718	3.01	1780	3.11
	Field Supplied Drive																			

1. Blower performance includes 1" filters. See STATIC RESISTANCE table for additional applications.
2. See RPM SELECTION table to determine desired motor sheave setting and to determine the maximum continuous BHP.
3. kW = BHP x 0.932.

TABLE 23: SUPPLY AIR BLOWER PERFORMANCE (BP072 BELT DRIVE) - BOTTOM DUCT APPLICATION

Air Flow (CFM)	Available External Static Pressure - IWG ¹																			
	0.2		0.4		0.6		0.8		1.0		1.2		1.4		1.6		1.8		2.0	
	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP
	Field Supplied Drive				Standard Drive Option								Hgh Static Drive Option							
1600	789	0.60	880	0.67	967	0.74	1050	0.82	1130	0.91	1207	0.99	1282	1.08	1353	1.18	1422	1.27	1489	1.37
1800	833	0.73	924	0.80	1011	0.87	1094	0.95	1174	1.03	1251	1.12	1326	1.21	1397	1.30	1466	1.40	1533	1.50
2000	881	0.89	971	0.96	1058	1.03	1142	1.11	1222	1.20	1299	1.28	1373	1.37	1445	1.47	1514	1.57	1580	1.66
2200	932	1.10	1022	1.17	1109	1.24	1193	1.32	1273	1.40	1350	1.49	1424	1.58	1496	1.67	1565	1.77	1631	1.87
2400	986	1.34	1076	1.41	1163	1.48	1246	1.56	1327	1.64	1404	1.73	1478	1.82	1550	1.92	1619	2.01	1685	2.11
2600	1042	1.62	1132	1.69	1219	1.76	1303	1.84	1383	1.92	1460	2.01	1534	2.10	1606	2.20	1675	2.29	1742	2.39
2800	1101	1.94	1191	2.00	1278	2.08	1362	2.15	1442	2.24	1519	2.33	1593	2.42	1665	2.51	1734	2.61	1800	2.71
3000	1162	2.28	1252	2.35	1339	2.42	1423	2.50	1503	2.59	1580	2.67	1654	2.76	1726	2.86	1795	2.96	1862	3.05
	Field Supplied Drive																			

1. Blower performance includes 1" filters. See STATIC RESISTANCE table for additional applications.
2. See RPM SELECTION table to determine desired motor sheave setting and to determine the maximum continuous BHP.
3. kW = BHP x 0.932.

TABLE 24: SUPPLY AIR BLOWER PERFORMANCE (BP036, 048, 060 & 072 DIRECT DRIVE) - SIDE FLOW APPLICATION

UNIT TONNAGE	MOTOR ¹ SPEED	AVAILABLE EXTERNAL STATIC PRESSURE - IWG ²																	
		0.2		0.3		0.4		0.5		0.6		0.7		0.8		0.9		1.0	
		CFM	WATTS	CFM	WATTS	CFM	WATTS	CFM	WATTS	CFM	WATTS	CFM	WATTS	CFM	WATTS	CFM	WATTS	CFM	WATTS
3 ³	HI	1582	320	1538	335	1496	349	1458	363	1418	376	1381	390	1338	403	1298	417	1255	430
	MED/HI	1488	263	1440	276	1396	290	1354	303	1309	316	1263	329	1214	343	1158	358	1085	374
	MED	1339	208	1292	221	1247	234	1201	246	1152	258	1102	272	1036	288	967	303	924	313
	MED/LOW	1233	171	1184	183	1135	195	1082	207	1026	220	957	235	895	248	-	-	-	-
4 ³	LOW	1081	130	997	134	935	145	863	158	-	-	-	-	-	-	-	-	-	-
	HI	2056	636	2017	696	1978	714	1942	734	1906	749	1864	764	1815	769	1728	743	1582	685
	MED/HI	1866	539	1832	557	1795	571	1754	585	1722	602	1679	619	1636	638	1582	653	1508	639
	MED	1680	408	1641	426	1594	438	1558	455	1517	472	1469	490	1415	505	1370	521	1337	536
5 ³	MED/LOW	1582	362	1541	380	1495	391	1465	406	1426	423	1377	440	1326	455	1292	469	1247	485
	LOW	1300	223	1258	237	1202	247	-	-	-	-	-	-	-	-	-	-	-	-
	HI	2256	883	2258	931	2247	950	2223	964	2182	979	2125	971	2044	940	1958	898	1864	854
	MED/HI	2145	771	2127	784	2119	808	2089	826	2051	844	2014	859	1965	861	1896	843	1801	806
6 ³	MED	2020	637	1999	656	1985	675	1947	696	1910	715	1876	730	1832	740	1793	756	1725	748
	MED/LOW	1757	413	1713	432	1677	451	1639	468	1597	479	1559	497	1521	513	1472	523	-	-
	LOW	1570	327	1536	339	1499	356	-	-	-	-	-	-	-	-	-	-	-	-
	HI	2256	883	2258	931	2247	950	2223	964	2182	979	2125	971	2044	940	1958	898	1864	854
6 ³	MED/HI	2145	771	2127	784	2119	808	2089	826	2051	844	2014	859	1965	861	1896	843	1801	806
	MED	2020	637	1999	656	1985	675	1947	696	1910	715	1876	730	1832	740	1793	756	-	-
	MED/LOW	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	LOW	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

1. Factory set on medium speed tap.
2. Includes allowances for a wet evaporator coil, 1" filters. Refer to STATIC RESISTANCES Table for resistance values.
3. Side Flow application (230 Volts)

TABLE 25: SUPPLY AIR BLOWER PERFORMANCE (BP036, 048, 060 & 072 DIRECT DRIVE) - BOTTOM FLOW APPLICATION

UNIT TONNAGE	MOTOR ¹ SPEED	AVAILABLE EXTERNAL STATIC PRESSURE - IWG ²																	
		0.2		0.3		0.4		0.5		0.6		0.7		0.8		0.9		1.0	
		CFM	WATTS	CFM	WATTS	CFM	WATTS	CFM	WATTS	CFM	WATTS	CFM	WATTS	CFM	WATTS	CFM	WATTS	CFM	WATTS
3 ³	HI	1527	320	1485	335	1445	349	1408	363	1370	376	1334	390	1292	403	1254	417	1213	430
	MED/HI	1437	263	1391	276	1349	290	1308	303	1265	316	1221	329	1174	343	1120	358	1049	374
	MED	1293	208	1248	221	1205	234	1161	246	1114	258	1065	272	1002	288	935	303	894	313
	MED/LOW	1191	171	1144	183	1097	195	1046	207	992	220	926	235	866	248	-	-	-	-
4 ³	LOW	1045	130	964	134	904	145	-	-	-	-	-	-	-	-	-	-	-	-
	HI	1985	636	1947	696	1909	714	1875	734	1840	749	1800	764	1752	769	1668	743	1528	685
	MED/HI	1802	539	1768	557	1733	571	1694	585	1662	602	1621	619	1580	638	1528	653	1456	639
	MED	1622	408	1585	426	1539	438	1505	455	1465	472	1419	490	1367	505	1324	521	1291	536
5 ³	MED/LOW	1528	362	1489	380	1444	391	1415	406	1377	423	1330	440	1281	455	1248	469	1205	485
	LOW	1256	223	1216	237	1161	247	-	-	-	-	-	-	-	-	-	-	-	-
	HI	2177	883	2179	931	2169	950	2145	964	2106	979	2051	971	1973	940	1890	898	1800	854
	MED/HI	2071	771	2053	784	2045	808	2016	826	1980	844	1944	859	1897	861	1830	843	1739	806
6 ³	MED	1950	637	1929	656	1916	675	1880	696	1844	715	1811	730	1768	740	1731	756	1665	748
	MED/LOW	1697	413	1654	432	1619	451	1583	468	1542	479	1506	497	1469	513	-	-	-	-
	LOW	1516	327	1484	339	1448	356	-	-	-	-	-	-	-	-	-	-	-	-
	HI	2177	883	2179	931	2169	950	2145	964	2106	979	2051	971	1973	940	1890	898	1800	854
6 ³	MED/HI	2071	771	2053	784	2045	808	2016	826	1980	844	1944	859	1897	861	1830	843	-	-
	MED	1950	637	1929	656	1916	675	1880	696	1844	715	1811	730	1768	740	-	-	-	-
	MED/LOW	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	LOW	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

1. Factory set on medium speed tap.
2. Includes allowances for a wet evaporator coil, 1" filters. Refer to STATIC RESISTANCES Table for resistance values.
3. Bottom Flow application (230 Volts)

TABLE 26: BELT DRIVE RPM SELECTION

Size (Tons)	HP	Max BHP	Motor Sheave	Blower Sheave	5 Turns Open	4 Turns Open	3 Turns Open	2 Turns Open	1 Turn Open	Fully Closed
036	1.5	1.73	1VL44	AK64	805	865	920	980	1035	1095
(3)	1.5	1.73	1VP56	AK66	1115	1170	1225	1280	1335	1390
048	1.5	1.73	1VL44	AK56	930	995	1060	1130	1195	1260
(4)	1.5	1.73	1VP56	AK61	1210	1270	1330	1390	1455	1515
060	1.5	1.73	1VL44	AK56	930	995	1060	1130	1195	1260
(5)	2	2.3	1VP56	AK56	1325	1395	1460	1525	1590	1660
072	1.5	1.73	1VL44	AK56	930	995	1060	1130	1195	1260
(6)	3	3.45	1VP56	AK56	1325	1395	1460	1525	1590	1660

TABLE 27: BELT DRIVE BLOWER MOTOR AND DRIVE DATA

Size (Tons)	Motor					Motor Sheave			Blower Sheave			Belt
	HP	RPM	Eff.	SF	Frame	Datum Dia. (in.)	Bore (in.)	Model	Datum Dia. (in.)	Bore (in.)	Model	
036	1-1/2	1725	0.8	1.15	56	2.8 - 3.8	7/8	1VL44	6.0	1	AK64	A37
(3.0)	1-1/2	1725	0.8	1.15	56	4.0 - 5.0	7/8	1VP56	6.2	1	AK66	A39
048	1-1/2	1725	0.8	1.15	56	2.8 - 3.8	7/8	1VL44	5.2	1	AK56	A36
(4.0)	1-1/2	1725	0.8	1.15	56	4.0 - 5.0	7/8	1VP56	5.7	1	AK61	A38
060	1-1/2	1725	0.8	1.15	56	2.8 - 3.8	7/8	1VL44	5.2	1	AK56	A36
(5.0)	2	1725	0.8	1.15	56	4.0 - 5.0	7/8	1VP56	5.2	1	AK56	A38
072	1-1/2	1725	0.8	1.15	56	2.8 - 3.8	7/8	1VL44	5.2	1	AK56	A36
(6.0)	3	1725	0.8	1.15	56	4.0 - 5.0	7/8	1VP56	5.2	1	AK56	A38

TABLE 28: STATIC RESISTANCES

DESCRIPTION		RESISTANCE, IWG										
		CFM										
		1000	1200	1400	1600	1800	2000	2200	2400	2600	2800	3000
ECONOMIZER ^{1,2}		0.07	0.08	0.09	0.11	0.13	0.15	0.17	0.20	0.23	0.26	0.30
ELECTRIC HEATERS ¹	7-15KW	0.04	0.05	0.06	0.07	0.08	0.10	0.12	0.14	0.16	0.19	0.22
	20-30KW	0.06	0.07	0.08	0.09	0.11	0.13	0.15	0.17	0.20	0.23	0.26
BOTTOM DUCT CONNECTIONS ¹		0.06	0.07	0.08	0.09	0.10	0.11	0.12	0.14	0.16	0.19	0.22

1. Deduct these resistance values from the available external static pressure shown in SUPPLY AIR BLOWER PERFORMANCE Tables.

2. The pressure through the economizer is greater for 100% outdoor air than for 100% return air. If the resistance of the return air duct system is less than 0.25 IWG, the unit will deliver less CFM during full economizer operation.

Drive Selection

1. Determine side or bottom supply air duct application.
2. Determine desired airflow.
3. Calculate or measure the amount of external static pressure.
4. Using the operating point determined from steps 1, 2 & 3, locate this point on the appropriate supply air blower performance table. (Linear interpolation may be necessary.)
5. Noting the RPM and BHP from step 4, locate the appropriate motor and/or drive on the RPM selection table.
6. Review the BHP compared to the motor options available. Select the appropriate motor and/or drive.
7. Review the RPM range for the motor options available. Select the appropriate drive if multiple drives are available for the chosen motor.
8. Determine turns open to obtain the desired operation point.

Example

1. 2200 CFM
2. 1.6 iwg
3. Using the supply air blower performance table below, the following data point was located: 1478 RPM & 1.82 BHP.
4. Using the RPM selection table below, Size X and Model Y is found.
5. 1.82 BHP exceeds the maximum continuous BHP rating of the 1.5 HP motor. The 2 HP motor is required.
6. 1478 RPM is within the range of the 2 HP drive.
7. Using the 2 HP motor and drive, 2.5 turns open will achieve 1478 RPM.

Example Supply Air Blower Performance


Air Flow (CFM)	Available External Static Pressure - IWG															
	0.2		0.4		0.6		0.8		1.0		1.2		1.4		1.6	
	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP
	Field Supplied Drive		Standard Drive Option								High Static Drive Option					
2000	907	1.00	990	1.07	1070	1.15	1146	1.23	1220	1.31	1291	1.40	1359	1.49	1425	1.58
2200	960	1.24	1043	1.31	1123	1.39	1199	1.47	1273	1.55	1344	1.64	1412	1.73	1478	1.82
2400	1015	1.51	1099	1.59	1178	1.66	1255	1.74	1329	1.83	1400	1.92	1468	2.01	1534	2.10
2600	1074	1.83	1157	1.90	1237	1.98	1314	2.06	1387	2.14	1458	2.23	-	-	-	-

Table X: RPM Selection

Size (Tons)	Model	HP	Max BHP	Motor Sheave	Blower Sheave	5 Turns Open	4 Turns Open	3 Turns Open	2 Turns Open	1 Turn Open	Fully Closed
X	Y	1.5	1.73	1VL44	AK56	930	995	1060	1130	1195	1260
		2	2.3	1VP56	AK56	1325	1395	1460	1525	1590	1660

Altitude/Temperature Correction Factors

Air Temp.	Altitude (Ft.)										
	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
40	1.060	1.022	0.986	0.950	0.916	0.882	0.849	0.818	0.788	0.758	0.729
50	1.039	1.002	0.966	0.931	0.898	0.864	0.832	0.802	0.772	0.743	0.715
60	1.019	0.982	0.948	0.913	0.880	0.848	0.816	0.787	0.757	0.729	0.701
70	1.000	0.964	0.930	0.896	0.864	0.832	0.801	0.772	0.743	0.715	0.688
80	0.982	0.947	0.913	0.880	0.848	0.817	0.787	0.758	0.730	0.702	0.676
90	0.964	0.929	0.897	0.864	0.833	0.802	0.772	0.744	0.716	0.689	0.663
100	0.946	0.912	0.880	0.848	0.817	0.787	0.758	0.730	0.703	0.676	0.651

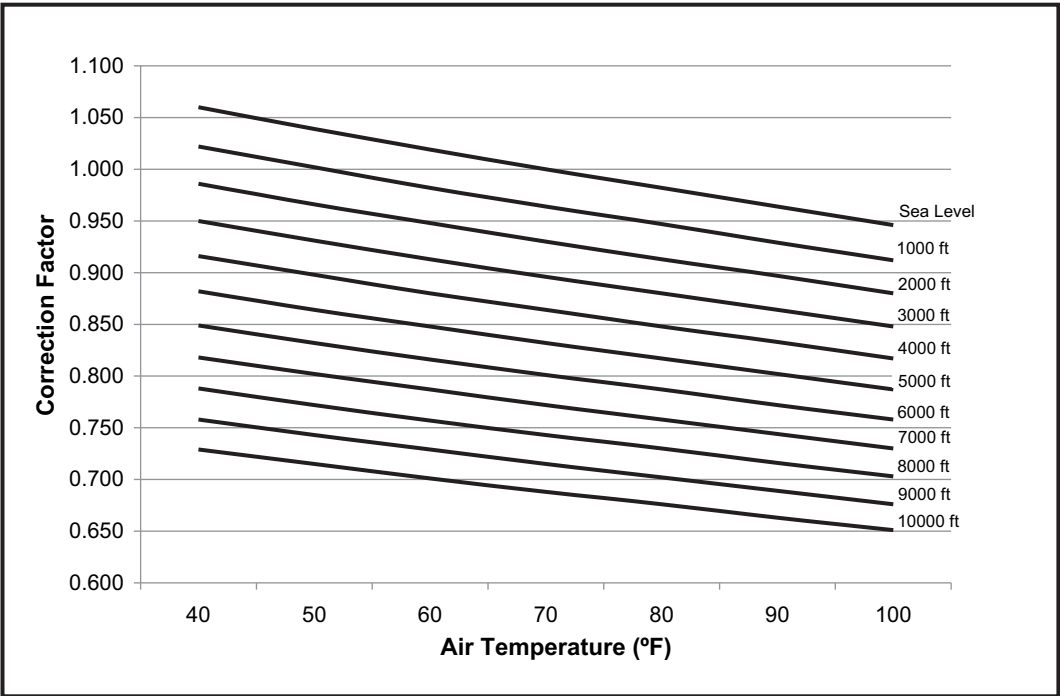

PHASING

Check for proper compressor rotation. If the blower or compressors rotate in the wrong direction at start-up, the electrical connection to the unit is misphased. Change the incoming line connection phasing to obtain proper rotation. (Scroll compressors operate in only one direction. If the scroll is drawing low amperage, has similar suction and discharge pressures, or producing a high noise level, the scroll is misphased).

CAUTION

Scroll compressors require proper rotation to operate correctly. Do not change the internal wiring to make the blower, condenser fans, or compressor rotate correctly. Change the incoming power to the main terminal block to obtain proper rotation.

SUPPLY AIR BLOWERS

These blowers have either multi-speed direct drive motors, or single speed motors equipped with a belt drive. Belt drive units have a variable pitch motor pulley that allows the blower speed to be adjusted.

CHECKING SUPPLY AIR CFM


The RPM of the supply air blower will depend on the required CFM, the unit accessories or options and the static resistances of both the supply and the return air duct systems. With this information, the motor speed tap (direct drive) or the motor pulley number of turns open (belt drive) can be determined from the Blower Performance Data Tables.

CAUTION

Belt drive blower systems MUST be adjusted to the specific static and CFM requirements for the application. The Belt drive blowers are NOT set at the factory for any specific static or CFM. Adjustments of the blower speed and belt tension are REQUIRED. Tighten blower pulley and motor sheave set screws after these adjustments. Re-checking set screws after 10-12 hrs. run time is recommended.

PROCEDURE FOR ADJUSTING BELT TENSION:

1. Loosen nuts (A) (top and bottom).
2. Adjust the tension by turning bolt (B).
3. Never loosen nuts (C) from each other.
4. Use a belt tension checker to apply a perpendicular force to be one belt at the midpoint of the span as shown. The deflection force should be applied until a specific deflection distance of 4mm (5/32") is obtained. To determine the deflection distance from normal position, use a straight edge from sheave to sheave as a reference line. The recommended deflection force is as follows:

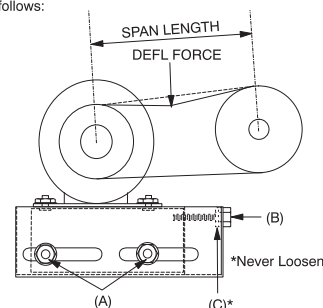

Tension new belts at the max. deflection force recommended for the belt section. Check the belt tension at least two times during the first 24 hours of operation. Any re-tensioning should fall between the min. and max. deflection force values.

5. After adjusting, re-tighten nuts (A).

FIGURE 12 - BELT ADJUSTMENT

Note the following:

1. The supply air CFM must be within the limitations shown in the Unit Application Data Table 1.
2. Pulleys can be adjusted in half turn increments.
3. The tension on the belt should be adjusted as shown in the Belt Adjustment Figure 12.
4. Tighten blower pulley and motor sheave set screws after any adjustments. Re-check set screws after 10-12 hrs. run time is recommended.

Start the supply air blower motor. Adjust the resistances in both the supply and the return air duct systems to balance the air distribution throughout the conditioned space. The job specifications may require that this balancing be done by someone other than the equipment installer.

To check the supply air CFM after the initial balancing has been completed:

1. Remove the two 5/16" dot plugs from the blower motor and the filter access panels shown in Figure 11.
2. Insert at least 8" of 1/4 inch tubing into each of these holes for sufficient penetration into the air flow on both sides of the indoor coil.

NOTE: The tubes must be inserted and held in a position perpendicular to the air flow so that velocity pressure will not affect the static pressure readings.

3. Using an inclined manometer, determine the pressure drop across a dry evaporator coil. Since the moisture on an evaporator coil may vary greatly, measuring the pressure drop across a wet coil under field conditions would be inaccurate. To assure a dry coil, the compressors should be deactivated while the test is being run.
4. Knowing the pressure drop across a dry coil, the actual CFM through the unit can be determined from the curve in Pressure Drop vs. Supply Air CFM (Figure 13).

▲ WARNING

Failure to properly adjust the total system air quantity and static pressure can result in extensive system damage.

After readings have been obtained, remove the tubes and reinstall the two 5/16" dot plugs that were removed in Step 1.

NOTE: De-energize the compressors before taking any test measurements to assure a dry indoor coil.

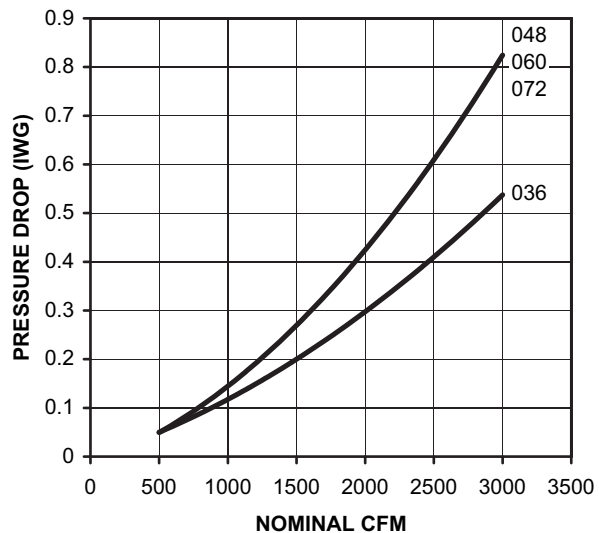


FIGURE 13 - PRESSURE DROP ACROSS COIL

OPERATION

SEQUENCE OF OPERATIONS OVERVIEW

For these units, the thermostat makes a circuit between "R" and "Y1" for the cooling cycle.

The call is passed to the unit control board (UCB), which then determines whether the requested operation is available and, if so, which components to energize.

For heating, the thermostat makes a circuit between "R" and "W1". The UCB energizes the compressor and condenser fan allowing the unit to run in heating mode. A demand defrost control operates the defrost cycle on 3 thru 5 units, and a time/temperature control operates the defrost cycle on 6 ton units.

If at any time a call for both heating and cooling are present, the heating operation will be performed. If operating, the cooling system is halted as with a completion of a call for cooling. Heating always takes priority.

COOLING SEQUENCE OF OPERATION

CONTINUOUS BLOWER

By setting the room thermostat fan switch to “ON,” the supply air blower will operate continuously.

INTERMITTENT BLOWER

With the room thermostat fan switch set to “AUTO” and the system switch set to either the “AUTO” or “HEAT” settings, the blower is energized whenever a cooling or heating operation is requested. The blower is energized after any specified delay associated with the operation.

When energized, the indoor blower has a minimum run time of 30 seconds. Additionally, the indoor blower has a delay of 10 seconds between operations.

NO OUTDOOR AIR OPTIONS

When the thermostat calls for cooling, the low-voltage control circuit from “R” to “Y1” and “G” is completed. The compressor and condenser fan motor are energized. After completing the specified fan on delay for cooling, the UCB will energize the blower motor.

Once the thermostat has been satisfied, it will de-energize Y1. If the compressor has satisfied its minimum run time, the compressor and condenser fan de-energize. Otherwise, the unit operates the cooling system until the minimum run time for the compressor has been completed. After the compressor de-energizes, the blower is stopped following the elapse of the fan off delay for cooling.

To be available, a compressor must not be locked-out due to a high or low-pressure switch or freestat trip and the anti-short cycle delay (ASCD) must have elapsed.

ECONOMIZER WITH SINGLE ENTHALPY SENSOR

When the room thermostat calls for cooling, the low voltage control circuit from “R” to “G” and “Y1” is completed. The UCB energizes the blower motor (if the fan switch on the room thermostat is set in the “AUTO” position) and drives the economizer dampers from fully closed to their minimum position. If the enthalpy of the outdoor air is below the setpoint of the enthalpy controller (previously determined), “Y1” energizes the economizer. The dampers will modulate to maintain a constant supply air temperature as monitored by the discharge air sensor. If the outdoor air enthalpy is above the setpoint, “Y1” energizes the compressor and condenser fan motor only.

Once the thermostat has been satisfied, it will de-energize “Y1”. If the compressor has satisfied its minimum run time, the compressor and condenser fan are de-energized. Otherwise, the unit operates the cooling sys-

tem until the minimum run times for the compressor has been completed. After the compressor de-energizes, the blower is stopped following the elapse of the fan off delay for cooling, and the economizer damper goes to the closed position. If the unit is in continues fan operation the economizer damper goes to the min. position.

ECONOMIZER WITH DUAL ENTHALPY SENSORS -

The operation with the dual enthalpy sensors is identical to the single sensor except that a second enthalpy sensor is mounted in the return air. This return air sensor allows the economizer to choose between outdoor air and return air, whichever has the lowest enthalpy value, to provide maximum operating efficiency.

ECONOMIZER (SINGLE OR DUAL) WITH POWER EXHAUST -

This system operates as specified above with one addition. The power exhaust motor is energized 45 seconds after the actuator position exceeds the exhaust fan setpoint on the economizer control. When the power exhaust is operating, the second stage of mechanical cooling will not operate. As always, the “R” to “G” connection provides minimum position but does not provide power exhaust operation.

MOTORIZED OUTDOOR AIR DAMPERS -

This system operation is the same as the units with no outdoor air options with one exception. When the “R” to “G” circuit is complete, the motorized damper drives open to a position set by the thumbwheel on the damper motor. When the “R” to “G” circuit is opened, the damper spring returns fully closed.

COOLING OPERATION ERRORS

Each cooling system is monitored for operation outside of the intended parameters. Errors are handled as described below. All system errors override minimum run times for compressors.

HIGH-PRESSURE LIMIT SWITCH

During cooling operation, if a high-pressure limit switch opens, the UCB will de-energize the compressor, initiate the ASCD (Anti-short cycle delay), and, stop the condenser fan. If the call for cooling is still present at the conclusion of the ASCD, the UCB will re-energize the compressor.

Should a high-pressure switch open three times within two hours of operation, the UCB will lock-out the compressor and flash a code (see Table 31).

LOW-PRESSURE LIMIT SWITCH

The low-pressure limit switch is not monitored during the initial 30 seconds of a cooling system's operation. For the following 30 seconds, the UCB will monitor the low-pressure switch to ensure it closes. If the low-pressure switch fails to close after the 30-second monitoring phase, the UCB will de-energize the compressor, initiate the ASCD, and stop the condenser fan.

Once the low-pressure switch has been proven (closed during the 30-second monitor period described above), the UCB will monitor the low-pressure limit switch for any openings. If the low-pressure switch opens for greater than 5 seconds, the UCB will de-energize the compressor, initiate the ASCD, and stop the condenser fan.

If the call for cooling is still present at the conclusion of the ASCD, the UCB will re-energize the compressor.

Should a low-pressure switch open three times within one hour of operation, the UCB will lock-out the compressor and flash a code (see Table 31).

FREEZESTAT

During cooling operation, if a freezestat opens, the UCB will de-energize the compressor, initiate the ASCD, and stop the condenser fan. If the call for cooling is still present at the conclusion of the ASCD, the UCB will re-energize the compressor.

Should a freezestat open three times within two hours of operation, the UCB will lock-out the compressor and flash a code (see Table 31).

LOW AMBIENT COOLING

To determine when to operate in low ambient mode, the UCB has a pair of terminals connected to a temperature-activated switch set at 45°F. When the low ambient switch is closed and the thermostat is calling for cooling, the UCB will operate in the low ambient mode.

Low ambient mode operates the compressors in this manner: 10 minutes on, 5 minutes off. The indoor blower is operated throughout the cycle. The 5-minute off period is necessary to defrost the indoor coil.

Low ambient mode always begins with compressor operation. Compressor minimum run time may extend the minutes of compressor operation. The defrost cycle will begin immediately following the elapse of the minimum run time.

When operating in low ambient mode, the UCB will not lockout the compressor due to a freezestat trip. However, a freezestat trip will de-energize the compressor. If the call for cooling is still present at the end of the ASCD and the freezestat has closed, the unit will resume operation.

SAFETY CONTROLS

The unit control board monitors the following inputs for the cooling system:

1. A suction line freezestat to protect against low evaporator temperatures due to a low airflow or a low return air temperature, (opens at $26 \pm 5^\circ\text{F}$ and resets at $38 \pm 5^\circ\text{F}$).
2. A high-pressure switch to protect against excessive discharge pressures due to a blocked condenser coil or a condenser motor failure, (opens at 405 ± 7 psig and resets at 265 ± 20 psig).
3. A low-pressure switch to protect against loss of refrigerant charge, (opens at 7 ± 3 psig and resets at 22 ± 5 psig).

The above pressure switches are hard-soldered to the unit. The refrigeration system is monitored and controlled. On any fault, the system will be affected by any safety/preventive action.

The unit control board monitors the temperature limit switch of electric heat units and the temperature limit switch and the gas valve of gas furnace units.

COMPRESSOR PROTECTION

The compressor also has inherent (internal) protection. If there is an abnormal temperature rise in a compressor, the protector will open to shut down the compressor. The UCB incorporates features to minimize compressor wear and damage. An anti-short cycle delay (ASCD) is utilized to prevent operation of a compressor too soon after its previous run. Additionally, a minimum run time is imposed any time a compressor is energized.

The ASCD is initiated on unit start-up and on any compressor reset or lock-out.

FLASH CODES

The UCB will initiate a flash code associated with errors within the system. Refer to UNIT CONTROL BOARD FLASH CODES Table 31.

RESET

Remove the call for cooling, by raising thermostat setting higher than the conditioned space temperature. This resets any pressure or freezestat flash codes.

HEATING SEQUENCE OF OPERATIONS

WITH OR WITHOUT ELECTRIC HEAT

When the thermostat calls for the first stage of heating, the low voltage control circuit is completed between "R" and "W1". The 24vac signal is passed through the UCB to the "Y" contact on the Defrost Control (DC) assuring the reversing valve cannot be energized, except during defrost. If the ASCD timer is satisfied the UCB will energize compressor contactor M1.

If the compressor alone cannot satisfy the heating requirements, a second stage call from the thermostat completes the circuit between "R" and "W2". This 24vac signal is passed through the UCB to the electric heat section (if available). The total available kW of electric heat will be energized on a call for "W2".

DEFROST MODE (3 THRU 5 TON)

The demand defrost control implements a temperature differential ("delta-T") demand defrost algorithm. The heat pump is allowed to operate in the heating mode until the combination of outdoor ambient and outdoor coil temperatures indicate that defrosting is necessary. When coil temperature is below the initiate point for the ambient temperature continuously for 4-1/2 minutes, the heat pump is put into a defrost cycle. This 4-1/2 minute timer eliminates unnecessary defrost cycles caused by refrigeration surges such as those that occur at the start of a heating cycle.

A timed inhibit feature prevents the system from responding to a call for defrost less than 20 minutes after the initiation of the previous defrost. After the 20 minute inhibit time has expired, temperature conditions must call for defrost continuously for 4-1/2 minutes before a defrost cycle is initiated. A temperature inhibit feature prohibits defrost if the coil temperature is above 40°F.

FORCED DEFROST

A forced-defrost feature puts the system into a defrost period every 6 hours and 4 minutes to recirculate lubricants, unless the coil temperature is above 40°F. All defrost timing occurs only while the compressor is on.

During the defrost mode, the defrost control will provide a 24 volt signal from terminal "W1/66" to the fan control terminal "W2". This signal will energize electric heat stage 1, if the unit is so equipped.

For trouble shooting purposes, the defrost cycle can be manually initiated by shorting the "TEST" pins together for 5 seconds. Defrost will terminate normally during the "TEST" mode.

DEFROST MODE (6 TON)

As mentioned earlier, the defrost control (DC) utilizes a time/temperature defrost scheme. The following two conditions must be met before the DC will enter a defrost mode:

The defrost thermostat (SD) must be closed. This normally open thermostat is mounted on the liquid line and is set to close at $28 \pm 4^\circ\text{F}$.

Once the defrost thermostat closes, the defrost control starts a run timer that must be satisfied before defrost can begin. This is accumulated compressor run time. The selection pin is factory set at 60 minutes, but is field adjustable to 30, 60 or 90 minutes.

When the DC enters the defrost mode, it's on-board defrost relay is powered. This energizes the reversing valve, de-energizes the condenser fan motor and energizes the unit's optional electric heater. The DC remains in defrost mode until either of the following two conditions is met:

1. The liquid line thermostat is open. It is set to open at $55 \pm 4^\circ\text{F}$.
2. The maximum defrost run time of 10 minutes is met.

FORCED DEFROST

The processor on the defrost board is only energized when the defrost sensor (DS) is closed.

To create a forced defrost:

1. The DS must either be closed or a jumper must be placed across the DFS terminals on the board.
2. Place a jumper across the test pin terminals on the board.

Depending on the selected defrost minimum run time of 30, 60 or 90 minutes, the board will go into defrost in 7.5, 15 or 22.5 seconds.

The DC will remain in defrost until the jumpers across the DS and the test pin terminals are removed.

Once the jumpers are removed, the board then terminates defrost when the DS opens or a maximum of 10 minutes after the test pin jumper is removed, whichever comes first.

SAFETY CONTROLS

The control circuit includes the following safety controls:

1. Temperature Limit Switch (TLS) - This control is located inside the heater compartment and is set to open at the temperature indicated in the Electric Heat Limit Control Setting Table 29. It resets automatically. The limit switch operates when a high temperature condition, caused by inadequate supply air flow occurs, thus shutting down the heater and energizing the blower.

TABLE 29: ELECTRIC HEAT LIMIT CONTROL SETTING

VOLTAGE	kW	TEMPERATURE LIMIT SWITCH	Open Temp °F
230-1-60	5	1	140
	7	1,3	140
	10	1,2,3	140
	15	2,4,6	140
	20	1,2,3,4,5	140
		6	150
	30	1,2,3,4,5,6	150
230-3-60	5	1,2,3	140
	7	1,2,3	140
	10	1,2,3	150
	15	2,4,6	140
	20	1,2,3,4,5,6	150
	30	1,3,5	160
		2,4,6	150
460-3-60	7	2,4,6	140
	10	2,4,6	140
	15	2,4,6	140
	20	3	160
	30	3	150
575-3-60	10	2,4,6	140
	15	2,4,6	140
	20	5	160
	30	5	150

HEAT ANTICIPATOR SETPOINTS

It is important that the anticipator setpoint be correct. Too high of a setting will result in longer heat cycles and a greater temperature swing in the conditioned space. Reducing the value below the correct setpoint will give shorter “ON” cycles and may result in the lowering of the temperature within the conditioned space. Refer to 30 for the required electric heat anticipator setting.

TABLE 30: ELECTRIC HEAT ANTICIPATOR SETPOINTS

HEATER KW	VOLTAGE	SETTING, AMPS	
		TH1	TH2
5	230-1-60 230-3-60	0.024	0.35
7		0.024	0.35
10		0.024	0.35
15		0.024	0.35
20		0.024	0.35
30		0.024	0.35
7	460-3-60	0.024	0.35
10		0.024	0.35
15		0.024	0.35
20		0.024	0.37
30		0.024	0.37
10	575-3-60	0.024	0.35
15		0.024	0.35
20		0.024	0.37
30		0.024	0.37

START-UP (COOLING)

PRESTART CHECK LIST

After installation has been completed:

1. Check the electrical supply voltage being supplied. Be sure that it is the same as listed on the unit nameplate.
2. Set the room thermostat to the off position.
3. Turn unit electrical power on.
4. Set the room thermostat fan switch to on.
5. Check indoor blower rotation.
 - If blower rotation is in the wrong direction. Refer to Phasing Section in general information section.
 - Check blower drive belt tension.
6. Check the unit supply air (CFM). See "CHECKING SUPPLY AIR CFM" on page 37.
7. Measure evaporator fan motor's amp draw.
8. Set the room thermostat fan switch to off.
9. Turn unit electrical power off.

OPERATING INSTRUCTIONS

1. Turn unit electrical power on.
2. Set the room thermostat setting to lower than the room temperature.
3. Compressor will energize after the built-in time delay (five minutes).

POST START CHECK LIST

1. Verify proper system pressures.
2. Measure the temperature drop across the evaporator coil.
3. Measure the system Amperage draw across all legs of 3 phase power wires.
4. Measure the condenser fan amp draw.

SHUT DOWN

1. Set the thermostat to highest temperature setting.
2. Turn off the electrical power to the unit.

TROUBLESHOOTING

COOLING TROUBLESHOOTING GUIDE

WARNING

Troubleshooting of components may require opening the electrical control box with the power connected to the unit. **Use extreme care when working with live circuits!** Check the unit nameplate for the correct line voltage and set the voltmeter to the correct range before making any connections with line terminals.

When not necessary, shut off all electric power to the unit prior to any of the following maintenance procedures so as to prevent personal injury.

CAUTION

Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation, which could cause injury to person and/or damage unit components. Verify proper operation after servicing.

On calls for cooling, if the compressors are operating but the supply air blower motor does not energize after a short delay (the room thermostat fan switch is in the "AUTO" position).

1. Turn the thermostat fan switch to the ON position. If the supply air blower motor does not energize, go to Step 3.
2. If the blower motor runs with the fan switch in the ON position but will not run after the compressor has energized when the fan switch is in the AUTO position, check the room thermostat for contact between R and G in the AUTO position during calls for cooling.
3. If the supply air blower motor does not energize when the fan switch is set to ON, check that line voltage is being supplied to the contacts of the M2, contactor, and that the contactor is pulled in. Check for loose wiring between the contactor and the supply air blower motor.

4. If M2 is pulled in and voltage is supplied to M2, lightly touch the supply air blower motor housing. If it is hot, the motor may be off on internal protection. Cancel any thermostat calls and set the fan switch to AUTO. Wait for the internal overload to reset. Test again when cool.
5. If M2 is not pulled in, check for 24 volts at the M2 coil. If 24 volts are present at M2 but M2 is not pulled in, replace the contactor.
6. Failing the above, if there is line voltage supplied at M2, M2 is pulled in, and the supply air blower motor still does not operate, replace the motor.
7. If 24 volts is not present at M2, check that 24 volts is present at the UCB supply air blower motor terminal, "FAN". If 24 volts is present at the FAN, check for loose wiring between the UCB and M2.
8. If 24 volts is not present at the "FAN" terminal, check for 24 volts from the room thermostat. If 24 volts are not present from the room thermostat, check for the following:
 - a. Proper operation of the room thermostat (contact between R and G with the fan switch in the ON position and in the AUTO position during operation calls).
 - b. Proper wiring between the room thermostat and the UCB.
 - c. Loose wiring from the room thermostat to the UCB.
9. If 24 volts is present at the room thermostat but not at the UCB, check for proper wiring between the thermostat and the UCB, i.e. that the thermostat G terminal is connected to the G terminal of the UCB, and for loose wiring.
10. If the thermostat and UCB are properly wired, replace the UCB.

On a call for cooling, the supply air blower motor is operating but the compressor is not (the room thermostat fan switch is in the "AUTO" position).

1. If installed, check the position of the economizer blades. If the blades are open, the economizer is providing free cooling and the compressors will not immediately operate. If both stages of cooling are requested simultaneously and the economizer provides free cooling, following a short delay the compressor will be energized unless it is locked out,

unless this option has been disabled through computer communications.

2. If no economizer is installed or the economizer is not opening to provide free cooling and the compressor does not energize on a call for cooling, check for line voltage at the compressor contactor, M1, and that the contactor is pulled in. Check for loose wiring between the contactor and the compressor.
3. If M1 is pulled in and voltage is supplied at M1, lightly touch the compressor housing. If it is hot, the compressor may be off on inherent protection. Cancel any calls for cooling and wait for the internal overload to reset. Test again when cool.
4. If M1 is not pulled in, check for 24 volts at the M1 coil. If 24 volts are present and M1 is not pulled in, replace the contactor.
5. Failing the above, if voltage is supplied at M1, M1 is pulled in, and the compressor still does not operate, replace the compressor.
6. If 24 volts is not present at M1, check for 24 volts at the UCB terminal, C1. If 24 volts is present, check for loose wiring between C1 and the compressor contactor.
7. If 24 volts is not present at the C1 terminal, check for 24 volts from the room thermostat at the UCB Y1 terminal. If 24 volts is not present from the room thermostat, check for the following:
 - a. 24 volts at the thermostat Y1 terminal
 - b. Proper wiring between the room thermostat and the UCB, i.e. Y1 to Y1, Y2 to Y2
 - c. Loose wiring from the room thermostat to the UCB.
8. If 24 volts is present at the UCB Y1 terminal, the compressor may be out due to an open high-pressure switch, low-pressure switch, or freestat. Check for 24 volts at the HPS1, LPS1, and FS1 terminals of the UCB. If a switch has opened, there should be a voltage potential between the UCB terminals, e.g. if LPS1 has opened, there will be a 24-volt potential between the LPS1 terminals.
9. If 24 volts is present at the UCB Y1 terminal and none of the protection switches have opened, the UCB may have locked out the compressor for repeat trips. The UCB should be flashing an alarm code. If not, press and release the ALARMS button on the UCB. The UCB will flash the last five alarms

on the LED. If the compressor is locked out, cancel any call for cooling. This will reset any compressor lock outs.

NOTE: While the above step will reset any lockouts, the compressor may be held off for the ASCD. See the next step.

10. If 24 volts is present at the UCB Y1 terminal and none of the switches are open and the compressor is not locked out, the UCB may have the compressor in an ASCD. Check the LED for an indication of an ASCD cycle. The ASCD should time out within 5 minutes. Press and release the TEST button to reset all ASCDs.
11. If 24 volts is present at the UCB Y1 terminal and the compressor is not out due to a protective switch trip, repeat trip lock out, or ASCD, the economizer terminals of the UCB may be improperly wired. Check for 24 volts at the Y1 "OUT" terminal of the UCB. If 24 volts is present, trace the wiring from Y1 "OUT" for incorrect wiring. If 24 volts is not present at the Y1 "OUT" terminal, the UCB must be replaced.
12. *For units without economizers:* If 24 volts is present at the Y1 OUT terminal, check for 24 volts at the Y1 "ECON" terminal. If 24 volts is not present, check for loose wiring from the Y1 "OUT" terminal to the Mate-N-Lock plug, the jumper in the Mate-N-Lock plug, and in the wiring from the Mate-N-Lock plug to the Y1 "ECON" terminal.
13. *For units with economizers:* If 24 volts is present at the Y1 "OUT" terminal, check for 24 volts at the Y1 "ECON" terminal. If 24 volts is not present, check for loose wiring from the Y1 "OUT" terminal to the Mate-N-Lock plug, a poor connection between the UCB and economizer Mate-N-Lock plugs, loose wiring from the Mate-N-Lock plug to the economizer, back to the Mate-N-Lock plug, and from the Mate-N-Lock plug to the Y1 "ECON" terminal. If nothing is found, the economizer actuator may have faulted and is failing to return the 24-volt "call" to the Y1 "ECON" terminal even though the economizer is not providing free cooling. To test, disconnect the Mate-N-Locks and jumper between the WHITE and YELLOW wires of the UCB's Mate-N-Lock plug. If the compressor energizes, there is a fault in the economizer wiring or actuator.
14. The UCB can be programmed to lock out compressor operation during free cooling and in low ambient conditions. These options are not enabled by default. Local distributors can test the UCB for this programming.
15. If none of the above correct the error, replace the UCB.

For units with factory installed economizers, the UCB is programmed to lock out compressor operation when the LAS set point is reached.

For units without factory installed or with field installed economizers, the UCB allows compressor operation all the time. This programming can be checked or changed by the local distributor.

UNIT FLASH CODES

Various flash codes are utilized by the unit control board (UCB) to aid in troubleshooting. Flash codes are distinguished by the short on and off cycle used (approximately 200ms on and 200ms off). To show normal operation, the control board flashes a 1 second on, 1 second off “heartbeat” during normal operation. This is to verify that the UCB is functioning correctly. Do not confuse this with an error flash code. To prevent confusion, a 1-flash, flash code is not used.

Current alarms or active restrictions are flashed on the UCB LED.

- **LAST ERROR** - When this button is pressed and released one time within five seconds, it flashes the last five flash codes on the board's LED. The most recent alarm is shown first and the oldest alarm is shown last.

When pressed and released twice within a five second span, the fault history is cleared.

- **TEST RESET** - When this button is pressed and released one time within five seconds, any anti-short cycle delays (ASCD) is bypassed for one cycle.

When this button is pressed twice within five seconds, any active lockouts are reset.

- **COMM SET UP** - If the board is to be networked with other units, this button is used to set the network address.

The first time the button is pressed within five seconds, it scans the bus, then assign itself the first available address {starts at 2}. It then flashes that address one time.

Pressing the button two times within five seconds causes the control to flash its address.

Pressing the button three times within five seconds forces the control to reset its address to one, which is the factory default.

In some cases, it may be necessary to “zero” the ASCD for the compressors in order to perform troubleshooting. To reset all ASCDs for one cycle, press and release the UCB TEST button once.

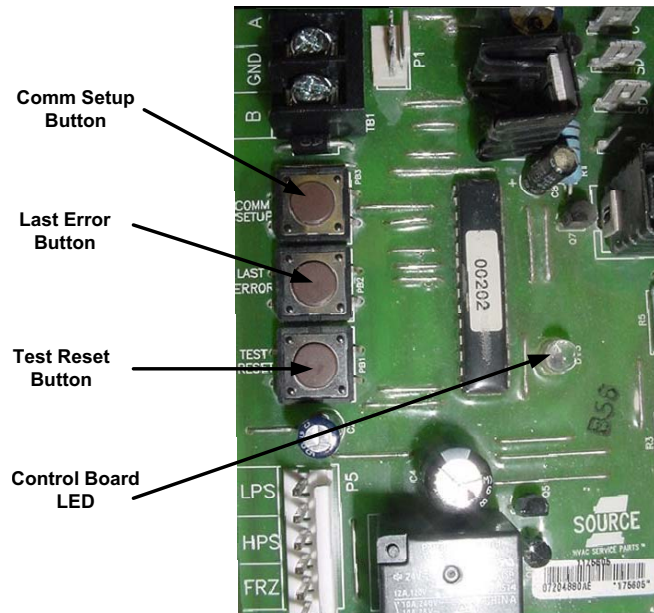


FIGURE 14 - UNIT CONTROL BOARD

FAN ON AND OFF DELAYS

The fan on and off delays can be field adjusted by pressing a combination of buttons on the UCB.

- 46
- **Electric Heat** - Press and release the **COMM SETUP** and **LAST ERROR** buttons at the same time. The control flashes twice on the LED as the control writes a 0 second ON and a 30 second OFF fan delay to the control's program memory.

TABLE 31: UNIT CONTROL BOARD FLASH CODES

Flash Code	Description
On Steady	Control Failure - Replace Control
Heart Beat	Normal Operation
1 Flash	Not Applicable
2 Flashes	Control waiting ASCD ¹
3 Flashes	HPS1 - Compressor Lock out
5 Flashes	LPS1 - Compressor Lock out
7 Flashes	FS1 - Compressor Lock out
9 Flashes	Ignition Control Locked Out/ Ignition Control Failure / Limit Switch Trip / No Jumper Plug in Heat Section
10 Flashes	Compressors Locked Out On Low Outdoor Air Temperature ¹
11 Flashes	Compressors Locked Out Because The Economizer Is Using Free Cooling ¹
13 Flashes	Compressor Held Off Due To Low Voltage ¹
14 Flashes	EEPROM Storage Failure (Control Failure)
OFF	No Power or Control Failure

1. These flash codes do not represent alarms.

MAINTENANCE

NORMAL MAINTENANCE

CAUTION

Prior to any of the following maintenance procedures, shut off all electric power to the unit to prevent personal injury.

FILTERS

Inspect once a month. Replace disposable or clean permanent type as necessary. **DO NOT** replace permanent type with disposable. The dimensional size of the replacement filter must be the same as the replaced filter.

MOTORS

Outdoor fan motors are permanently lubricated and require no maintenance.

Indoor Blower Motor and Drive - The indoor blower motor features ball bearings that do not require periodic lubrication.

WARNING

Perform all maintenance operations on the blower motor with electric power disconnected from the unit.

On an annual basis, check the motor for accumulations of dust, etc. that may block the cooling slots in the motor shell. Check for loose, damaged or misaligned drive components. Check that all mounting bolts are tight. Replace defective parts as required.

OUTDOOR COIL

Dirt should not be allowed to accumulate on the outdoor coil surface or other parts in the air circuit. Cleaning should be as often as necessary to keep coil clean. Use a brush, vacuum cleaner attachment, or other suitable means. If water is used to clean coil, be sure electric power to the unit is shut off prior to cleaning.

NOTE: Exercise care when cleaning the coil so that the coil fins are not damaged.

Subject to change without notice. Printed in U.S.A.
Copyright © 2009 by Johnson Controls, Inc. All rights reserved.

362242-YIM-B-0109
Supersedes: 362242-YIM-A-0208

Johnson Controls Unitary Products
5005 York Drive
Norman, OK 73069